

Mandis RC038SR Replacement Remote Control



Mandis RC038SR Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC038SR Replacement Remote Control Instructions 

Contents

- [1 Mandis RC038SR Replacement Remote Control](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions \(FAQ\)](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis RC038SR Replacement Remote Control



Marantz RC038SR-MAIN User Manual

Specifications

- Model: Marantz RC038SR-MAIN
- Compatible Devices: Power CBL/SAT, DVD, TV, Audio, Blu-ray, AUX1, Tuner, Bluetooth, AUX2, Game, Phono, USB Media Player, CD, Internet Radio
- Power Source: Rechargeable Battery

Product Usage Instructions

Power On/Off

To power on the device, press the “Power” button. To power off the device, press and hold the “Power” button until the device turns off.

Device Selection

Use the buttons labeled with the device names (e.g., Power CBL/SAT, DVD, TV, Audio) to select the desired device to control.

Volume Control

To increase the volume, press the “Volume+” button. To decrease the volume, press the “Volume-” button.

Mute

To mute the audio, press the “Mute” button. Press the “Mute” button again to unmute.

Navigating Menus

Use the directional buttons (Up, Down, Left, Right) to navigate through menus and options. Press the “OK” button to select an option.

Playback Control

Use the Play/Pause buttons to control media playback. Press the Play button to start playback and Pause button to pause playback.

Use the Step/Freeze button for frame-by-frame playback and Slow button for slow-motion playback.

Smart Select

Use the Smart Select buttons (1, 2, 3, 4) to quickly access preconfigured settings for different devices or activities.

Frequently Asked Questions (FAQ)

Q: How do I change the device I want to control?

A: Use the buttons labeled with the device names (e.g., Power CBL/SAT, DVD, TV, Audio) to select the desired device to control.

Q: How do I adjust the volume?

A: To increase the volume, press the “Volume+” button. To decrease the volume, press the “Volume-” button.

Marantz RC038SR-ZONE3 ()



Original		Rechange		Original		Rechange	
	Power		Power		Sleep		Sleep / Timer
	CBL/SAT		Shift + 0		Volume+		Vol+
	DVD		Shift + 2		CH/Page-		CH- / Page-
	Tv Audio		Shift + 1		Mute		Mute / Dimmer
	Blu-ray		Shift + 4		Eco		D.Menu / Top
	AUX1		Shift + 5		Volume-		Vol-
	Tuner		Shift + 6		Info		Info / Angle
	Bluetooth		Shift + 9		Up		Up
	AUX2		Shift + 7		Option		Shift + Setup / OPT / Tools
	Game		Shift + Guide / EPG / -/--		Left		Left
	Phono		Guide / EPG / -/--		Enter		OK
	USB		Shift + 8		Right		Right
	Media Player		Display / Media		Back		Back / Return
	CD		Shift + 3		Down		Down
	Internet Radio		Shift + Fav / Marker / PC		Setup		Setup / OPT /
	CH/Page+		CH+ / Page+		Home		Menu / Home
					Stop		Stop / Hold



Original	Recharge	Original	Recharge
 Pause	 Pause / Step / Freeze	 4	 4
 Play	 Play / Slow	 5	 5
 I<</Tune-	 I<< / Preset-	 6	 6
 >>I/Tune+	 >>I / Preset+	 7	 7
 <<	 << / Tune-	 8	 8
 >>	 >> / Tune+	 9	 9
 Smart Select 1	 Sound / Title	 0	 0
 Smart Select 2	 Audio / Lang I/II	 Enter	 Fav / Marker / PC
 Smart Select 3	 Subtitle / EQ		
 Smart Select 4	 Eject / Surround		
 Green/Movie	 Green / APP / Repeat		
 Red/Music	 Red / Netflix / Search		
 Blue/Game	 Blue / Prime Video / Random		
 Yellow/Pure	 Yellow / YouTube / Repeat		
 1	 1		
 2	 2		
 3	 3		

Marantz RC038SR-ZONE2 ()



Original	Recharge	Original	Recharge
 Power	 Power	 Sleep	 Sleep / Timer
 CBL/SAT	 Shift + 0	 Volume+	 Vol+
 DVD	 Shift + 2	 CH/Page-	 CH- / Page-
 Tv Audio	 Shift + 1	 Mute	 Mute / Dimmer
 Blu-ray	 Shift + 4	 Volume-	 Vol-
 AUX1	 Shift + 5	 Up	 Up
 Tuner	 Shift + 6	 Left	 Left
 Bluetooth	 Shift + 9	 Enter	 OK
 Game	 Shift + Guide / EPG / -/-	 Right	 Right
 AUX2	 Shift + 7	 Back	 Back / Return
 Phono	 Guide / EPG / -/-	 Down	 Down
 USB	 Shift + 8	 Home	 Menu / Home
 Media Player	 Display / Media	 Stop	 Stop / Hold
 CD	 Shift + 3	 Pause	 Pause / Step / Freeze
 Internet Radio	 Shift + Fav / Marker / PC	 Play	 Play / Slow
 CH/Page+	 CH+ / Page+	 I<</Tune-	 I<< / Preset-
		 >>I/Tune+	 >>I / Preset+



Original		Rechange	
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Sound / Title
	Smart Select 2		Audio / Lang I/II
	Smart Select 3		Subtitle / EQ
	Smart Select 4		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Fav / Marker / PC

Marantz RC038SR-ZONE3 ()



Original	Rechange	Original	Rechange
	Power		Sleep / Timer
	CBL/SAT		Vol+
	DVD		CH- / Page-
	Tv Audio		Mute / Dimmer
	Blu-ray		Vol-
	AUX1		Up
	Tuner		Left
	Bluetooth		Right
	Game		Back / Return
	AUX2		Down
	Phono		Menu / Home
	USB		Stop / Hold
	Media Player		Pause / Step / Freeze
	CD		Play / Slow
	Internet Radio		I<< / Tune-
	CH/Page+		>>I / Tune+
			<< / Tune-



Original	Rechange
	>> / Tune+
	Smart Select 1
	Smart Select 2
	Smart Select 3
	Smart Select 4
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Enter
	Enter
	>> / Tune+
	Sound / Title
	Audio / Lang I/II
	Subtitle / EQ
	Eject / Surround
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	OK
	Fav / Marker / PC

Documents / Resources



[Mandis RC038SR Replacement Remote Control](#) [pdf] Instructions
RC038SR Replacement Remote Control, RC038SR, Replacement Remote Control, Remote Control

References

- [M Télécommande qui remplace MARANTZ RC038SR \(30701023400AM\)](#)
- [User Manual](#)