

Mandis RC051 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC051 Remote Control Instructions 



Contents

1 RC051 Remote Control

2 Documents / Resources

2.1 References

3 Related Posts

RC051 Remote Control

Salora RC051



Original		Replacement		Original		Replacement	
	Standby		Power		Audio		Dual
	Mute		Mute		Subtitle		Subt
	1		1		CH.List		List
	2		2		FAV		Pre Ch
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Ok		Ok
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		Exit/Cancel		Exit
	Display		Info		S.Mode		Shift + Dual
	Recall		Back		P.Mode		Format
	Setup		Menu		CH+/Page+		Ch +
	EPG		Guide		CH-/Page-		Ch -
	Source		AV		Red/Goto		Red





Original		Replacement		Original		Replacement	
A-B	Green/A-B	B	Green	Zoom+	Zoom+/Size	SHIFT + +	Shift + Ch +
REPEAT	Yellow/Repeat	C	Yellow	Zoom-	Zoom-	SHIFT + -	Shift + Ch -
ANGLE	Blue/Angle	D	Blue	Eject	Eject		
Record	Record	REC MODE	Rec	Sleep	Sleep		
Rec. List	Rec. List	HOME SMART	Smart				
TV/Radio	TV/Radio	SEARCH TV/R	TV/R				
Scaler	Scaler	ECO 3D	3D				
Play	Play	PLAY MODE	Play				
Pause/Reveal	Pause/Reveal		Pause				
Stop/Index	Stop/Index		Stop				
I<<	I<<		I<<				
Mix	Mix		Mix				
<</Mix	<</Mix		<<				
>>I	>>I		>>				
>>	>>		>>				
Text	Text		Text				
S.Page /	S. Page /		S. Page /				
Hold/Title	Hold/Title		Hold/Title				



<https://all-remote-controls.co.uk/en/Salora/1056961-79728-replacement-remote-control-for-Salora-RC051.html>



Documents / Resources

	Mandis RC051 Remote Control [pdf] Instructions RC051 Remote Control, RC051, Remote Control, Control
--	--

References

- [Replacement remote control for SALORA RC051](#)
- [User Manual](#)