



# Mandis RC051 Salora Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC051 Salora Remote Control Instructions 

## Contents

- [1 Mandis RC051 Salora Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Accessing Channels](#)
- [5 Frequently Asked Questions \(FAQ\)](#)
- [6 Using Instructions](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

# Mandis

**Mandis RC051 Salora Remote Control**



## Product Information

### Specifications

- **Model:** Salora RC051
- **Compatibility:** Original and Replacement remote control for Salora devices
- **Buttons:** Standby, Mute, 1-9, 0, Display, Recall, Setup, EPG,
  - Source, Power, Info, Back, Menu, Guide, AV, Audio, Subtitle,
  - CH.List, FAV, Up, Down, Right, Left, OK, Vol+, Vol-, Exit/Cancel,
  - S.Mode, P.Mode, CH+/Page+, CH-/Page-, Red/Goto, Green/A-B,
  - Yellow/Repeat, Blue/Angle, Record, Rec. List, TV/Radio, Scaler,
  - Play, Pause/Reveal, Stop/Index, L>, Text,
  - S.Page/HDVoDId-/MTeitnleu, Dual/Subt/List/Pre Ch

## Product Usage Instructions

### Power On and Off

- To power on the device, press the Standby button. To power off the device, press and hold the Standby button for a few seconds.

## **Muting Sound**

- To mute the sound, press the Mute button. Press the Mute button again to unmute the sound.

## **Navigating Menus and Settings**

- Use the directional buttons (Up, Down, Right, Left) to navigate through menus and settings. Press the OK button to confirm selections.

## **Adjusting Volume**

- Press the Vol+ button to increase the volume and the Vol- button to decrease the volume.

## **Accessing Channels**

- Use the CH+/Page+ and CH-/Page- buttons to navigate through channels. Press the OK button to select a channel.
- Accessing Additional Functions
- Use the various buttons on the remote control to access additional functions such as Audio, Subtitle, FAV (Favorite Channels), EPG (Electronic Program Guide), and more.

## **Using the Remote with a Smart TV**

- If you have a Smart TV, you can use the remote control to access Smart TV functions. Use the Smart TV/R button to access Smart TV features.

## **Frequently Asked Questions (FAQ)**

- **Q:** Is the Salora RC051 remote control compatible with all Salora devices?
- **A:** Yes, the Salora RC051 remote control is compatible with all Salora devices.
- **Q:** Where can I find a replacement Salora RC051 remote control?
- **A:** You can find a replacement Salora RC051 remote control on the following website:

Replacement Remote Control for Salora RC051

## **Using Instructions**



Original	Replacement	Original	Replacement
Standby	Power	Audio	Dual
Mute	Mute	Subtitle	Subt
1	1	CH.List	List
2	2	FAV	Pre Ch
3	3	Up	Up
4	4	Down	Down
5	5	Right	Right
6	6	Left	Left
7	7	Ok	Ok
8	8	Vol+	Vol +
9	9	Vol-	Vol -
0	0	Exit/Cancel	Exit
Display	Info	S.Mode	Shift + Dual
Recall	Back	P.Mode	Format
Setup	Menu	CH+/Page+	Ch +
EPG	Guide	CH-/Page-	Ch -
Source	AV	Red/Goto	Red



Original	Replacement	Original	Replacement
Green/A-B	Green	Zoom+/Size	Shift + Ch +
Yellow/Repeat	Yellow	Zoom-	Shift + Ch -
Blue/Angle	Blue	Eject	Eject
Record	Rec	Sleep	Sleep
Rec. List	Smart		
TV/Radio	TV/R		
Scaler	3D		
Play	Play		
Pause/Reveal	Pause		
Stop/Index	Stop		
I<<	I<<		
<</Mix	<<		
>>I	>>I		
>>	>>		
Text	Text		
S.Page /	D. Menu		
Hold/Title	Media		



<https://all-remote-controls.co.uk/en/Salora/1056961-79728-replacement-remote-control-for-Salora-RC051.html>.

## Documents / Resources



[Mandis RC051 Salora Remote Control](#) [pdf] Instructions

RC051 Salora Remote Control, RC051, Salora Remote Control, Remote Control, Control

## References

- [User Manual](#)