



Mandis RC1055 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC1055 Remote Control Instructions 

Contents

- [1 Mandis RC1055 Remote Control](#)
- [2 Product Information](#)
- [3 Overview](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Mandis

Mandis RC1055 Remote Control



Product Information

Specifications

- **Model:** RC1055
- **Product Type:** Remote Control
- **Compatibility:** Original and Sostenuto devices
- **Dimensions:** Not specified
- **Weight:** Not specified

Product Usage Instructions

Power and Mute Control

To power on or off your device, press the “Power” button located on the remote control. To mute or unmute the audio, press the “Mute” button.

- **Navigation and Selection**

Use the arrow buttons (Up, Down, Left, Right) to navigate through menus and options. Press the “OK/Select” button to confirm your selection.

- **Volume and Channel Control**

To adjust the volume, use the “Vol+” and “Vol-” buttons. To change channels, use the “CH+” and “CH-” buttons.

- **Input and Source Selection**

To switch between different AV inputs or sources, press the “AV/Source” button. Use the number buttons (1-9) to directly enter a channel number.

Additional Functions

The remote control offers additional functions for specific features

- “Info” or “[i]”: Displays information about the current program or content.
- “Menu”: Opens the device’s menu or settings.
- “Text”: Activates teletext or text mode.
- “Guide” or “EPG”: Accesses the electronic program guide.

- “Exit” or “Cancel”: Exits menus or cancels current actions.
- “Red”, “Green”, “Yellow”, “Blue”: Additional function buttons that can vary depending on the device and context

FAQ

- **Q: Where can I find the complete user manual?**

A: The complete user manual can be found at the following link

[User Manual Link.](#)

- **Q: Is the remote control compatible with all devices?**

A: The remote control is compatible with both Original and Sostituto devices.<https://tutti-telecomandi.it/it/1037807-18648-telecomando-di-sostituzione-per-RC1055-30054683.html>

Overview



Originale	Sostituto	Originale	Sostituto
	Power		Vol+
	Mute		CH- / Page-
	1		I-II
	2		Vol-
	3		Up
	4		Left
	5		OK
	6		Right
	7		Menu / Home
	8		Down
	9		TV/Radio /
	AV/Source		Red / Netflix / Search
	0		Green / APP / Repeat
	Exit		Yellow / YouTube / Repeat
	-/--		Blue / Prime Video / Random
	CH+		Text / Goto
	[i]/Info		Sleep / Timer





Originale	Sostituto	Originale	Sostituto
 [=+]/[X]	 << / Tune-		
 [=x]/[·]	 >> / Tune+		
 [=]/[*]	 I<< / Preset-		
 [=♦]/[+]/Wide	 Picture / Format		
 [=?]	 >>I / Preset+		
 [=i]/Guide	 Guide / EPG / -/-		
 P<P/SWAP	 Fav / Marker / PC		
 PP	 Back / Return		



<https://tutti-i-telecomandi.it/it/1037807-18648-telecomando-di-sostituzione-per-RC1055-30054683.html>

Documents / Resources

	Mandis RC1055 Remote Control [pdf] Instructions RC1055 Remote Control, RC1055, Remote Control, Control
---	---

References

- [M Telecomando sostituto di RC1055 \(30054683\)](#)
- [User Manual](#)