




# Mandis RC1080 Remote Control Instructions

 
[Home](#) » [Mandis](#) » Mandis RC1080 Remote Control Instructions 

## Contents

- [1 Mandis RC1080 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions \(FAQ\)](#)
- [5 Product Overview](#)
- [6 Remote Using Instruction](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

**Mandis**

## Mandis RC1080 Remote Control

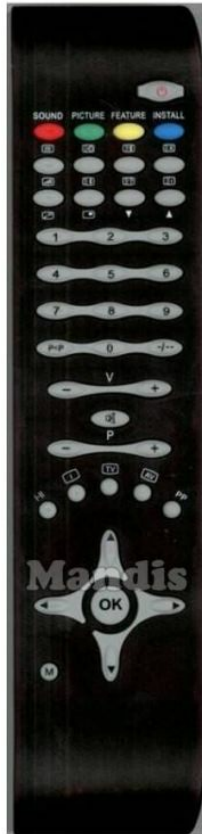

### Product Information

#### Specifications

- Power: Red
- Sound: Green
- Picture: Yellow
- Feature: Blue
- Install:
- Text Options:
- Format:
- Smart:
- Subt:
- Media:
- 3D:
- List:

### Product Usage Instructions

#### Power

The power button is represented by the color red. To turn on the product, press the power button once. To turn off the product, press the power button again.

#### Sound

The sound button is represented by the color green. Use the sound button to adjust the volume of the product. Press the sound button multiple times to increase or decrease the volume.

## **Picture**

The picture button is represented by the color yellow. Use the picture button to adjust the picture settings of the product. Press the picture button multiple times to cycle through different picture modes or settings.

## **Feature**

The feature button is represented by the color blue. Use the feature button to access additional features and functions of the product. Press the feature button multiple times to navigate through different features.

## **Install**

The install button is used for installation purposes. Please refer to the specific installation instructions provided in the user manual for detailed information on how to use this button.

## **Text Options**

The text options button is used for manipulating text on the product. Please refer to the specific instructions provided in the user manual for detailed information on how to use this button.

## **Format**

The format button is used to change the format of the product's display. Please refer to the specific instructions provided in the user manual for detailed information on how to use this button.

## **Smart**

The smart button is used to activate the smart features of the product. Please refer to the specific instructions provided in the user manual for detailed information on how to use this button.

## **Subt**

The subt button is used for subtitle options. Please refer to the specific instructions provided in the user manual for detailed information on how to use this button.

## **Media**

The media button is used to access media playback options. Please refer to the specific instructions provided in the user manual for detailed information on how to use this button.

## **3D**

The 3D button is used to enable or disable 3D mode on the product. Please refer to the specific instructions provided in the user manual for detailed information on how to use this button.

## **List**

The list button is used to access a list of options or settings. Please refer to the specific instructions provided in the user manual for detailed information on how to use this button.

## **Frequently Asked Questions (FAQ)**

### **Q: How do I turn on the product?**

A: Press the power button (red) once to turn on the product.

### **Q: How do I adjust the volume?**

A: Press the sound button (green) multiple times to increase or decrease the volume.

### **Q: How do I change the picture settings?**

A: Press the picture button (yellow) multiple times to cycle through different picture modes or settings.

### **Q: How do I access additional features?**

A: Press the feature button (blue) multiple times to navigate through different features.

### **Q: What is the install button used for?**

A: Please refer to the specific installation instructions provided in the user manual for detailed information on how to use this button.

 
### **Q: How do I manipulate text on the product?**

A: Please refer to the specific instructions provided in the user manual for detailed information on how to use the text options button.

### **Q: How do I change the format of the display?**






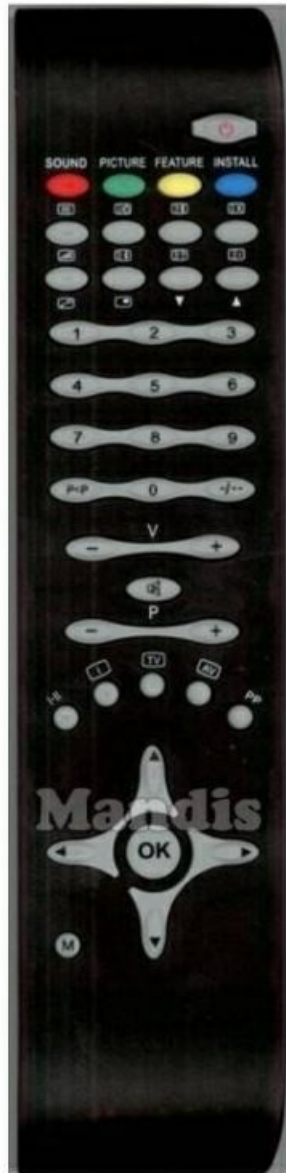






 A: Please refer to the specific instructions provided in the user manual for detailed information on how to use the format button.

## Product Overview



 




## Remote Using Instruction

Original/ Replacement

	Power		Power		5		5
	Red/Sound		Red		6		6
	Green/Picture		Green		7		7
	Yellow/Feature		Yellow		8		8
	Blue/Install		Blue		9		9
	[≡]		Text		0		0
	[≡O]		Options		P<P		Pre Ch
	[≡+]		Format		-/--		Guide
	[≡X]		Smart		Vol+		Vol +
	[.≡]/[/■]		Subt		Vol-		Vol -
	[≡◆]/[■]		Media		Mute		Mute
	[≡?]/↓		3D		P+		Ch +
	[≡i]/↑		List		P-		Ch -
	1		1		I-II		Dual
	2		2		[i]		Info
	3		3		TV		TV/R
	4		4		AV		AV

	PP		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	M		Menu

- <https://all-remote-controls.co.uk/en/1056382-18484-replacement-remote-control-for-RC-1080-30035268.html>



[Mandis RC1080 Remote Control](#) [pdf] Instructions  
RC1080 Remote Control, RC1080, Remote Control, Control

## References

- [M Replacement remote control for RC 1080 \(30035268\)](#)
- [User Manual](#)