

Mandis RC1240-2440 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC1240-2440 Replacement Remote Control Instructions 





Contents

[1 RC1240-2440 Replacement Remote Control](#)

[2 Documents / Resources](#)

[2.1 References](#)

RC1240-2440 Replacement Remote Control

Original		Replacement	
	Power		Power
	1		1

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	M		Menu
	--		Guide
	Up		Up
	OK		Ok
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Sound		Dual
	Green		Green
	Picture		Format
	Yellow		Yellow
	Feature		Media
	Blue		Blue
	Install		Smart

	AV		AV
	TV		TV/R
	TXT		Text
	Mute		Mute



<https://all-remote-controls.co.uk/en/Inno-Hit/1055734-27513-replacement-remote-control-for-Inno-Hit-RC1240-2440.html>

Documents / Resources



[Mandis RC1240-2440 Replacement Remote Control](#) [pdf] Instructions

RC1240-2440 Replacement Remote Control, RC1240-2440, Replacement Remote Control, Remote Control

References

- [User Manual](#)