



Mandis RC1810 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC1810 Remote Control Instructions 

Mandis RC1810 Remote Control



Contents

[1 FUMCTION BUTTON](#)

[2 CUSTOMERS
SUPPORT](#)

[3 Documents / Resources](#)

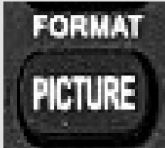 
[3.1 References](#)

[4 Related Posts](#)

FUMCTION BUTTON

Originate	Sostenuto
-----------	-----------

	Power		Power
	Red/↑		Red / Netflix / Search
	Green/↓		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]		Text / Goto
	[≡x]		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	[*]/[■ ■]		Zoom / Size

 SCREEN	Screen	 FORMAT PICTURE	Picture / Format
 LANG	Lang	 LANG I/II AUDIO	Audio / Lang I/II
 SUBTITLE	Subtitle	 EQ SUBTITLE	Subtitle / EQ
 SLEEP	Sleep	 TIMER SLEEP	Sleep / Timer
 1	1	 TV 1	1
 2	2	 DVD 2	2
 3	3	 CD - STD 3	3
 4	4	 VIDEO 4	4

	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Tv/DTV		TV/Radio /
	Vol-		Vol-



Vol+



Mute



PR-



Vol+



Mute / Dimmer



CH- / Page-



PR+



Preset



Source



CH+ / Page+



Smart / List



AV / Input / RDS



Info/[≡?]



 
 
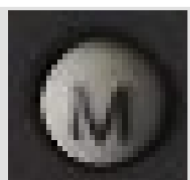 
Info / Angle



Swap/Recall



Display / Media

	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	M		Menu / Home



CUSTOMERS SUPPORT

<https://tutti-i-telecomandi.it/it/1037837-18342-telecomando-di-sostituzione-per-RC1810-30063516.html>



Documents / Resources



[Mandis RC1810 Remote Control](#) [pdf] Instructions
RC1810 Remote Control, RC1810, Remote Control

References

- [User Manual](#)