

Mandis RC1810 Remote Control



Mandis RC1810 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC1810 Remote Control Instructions 

Contents

- 1 [Mandis RC1810 Remote Control](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [Frequently Asked Questions](#)
- 5 [Product Information](#)
- 6 [Remote Using Instruction](#)
- 7 [Documents / Resources](#)
 - 7.1 [References](#)



Mandis RC1810 Remote Control



Product Information

The product is a remote control for a television or media device. It is compatible with the RC1810 model. The remote control has various buttons for controlling different functions of the device, such as power, volume, channel selection, and navigation.

Specifications:

- Model: RC1810
- Compatibility: TV and media devices
- Color: Red/Green/Yellow/Blue

Product Usage Instructions

Power On/Off:

To turn on the device, press the “Power” button. To turn off the device, press the “Power” button again.

Changing Channels:

Use the number buttons (1-9) to directly enter the desired channel number. Press the “0” button for channel 0. Use the “CH-” and “CH+” buttons to navigate through channels.

Adjusting Volume:

Use the “Vol-” and “Vol+” buttons to decrease or increase the volume respectively. Press the “Mute” button to mute/unmute the sound.

Navigating Menus:

Use the arrow buttons (Up/Down/Left/Right) to navigate through menus and options. Press the “OK” button to select an option or confirm a selection. Press the “Menu” or “Home” button to go back to the main menu or home screen.

Additional Functions:

The remote control has various additional functions represented by different buttons:

- “EPG”: Electronic Program Guide
- “Subtitle”: Select subtitle language
- “Sleep/Timer”: Set sleep timer
- “Netflix/APP/YouTube/Prime Video”: Access streaming apps
- “Text/Goto/Exit/Cancel/Clear”: Text input and navigation
- “Guide/Zoom/Picture/Audio”: TV guide, zoom, picture, and audio settings

Frequently Asked Questions

Q: How do I change the language settings on my TV?

A: Use the “Screen Lang” button to access the language settings. Use the arrow buttons to select the desired language and press “OK” to confirm.

Q: Can I use this remote control with other devices?

A: The remote control is primarily designed for TVs, but it may also work with compatible media devices. Check the compatibility of your device with the RC1810 model.

Q: How do I access the TV’s electronic program guide?

A: Press the “EPG” button to access the electronic program guide. Use the arrow buttons to navigate through the guide and press “OK” to select a program.

Q: What does the “Subtitle” button do?

A: The “Subtitle” button allows you to select the subtitle language for supported programs or media.

Product Information



Remote Using Instruction

Original/ Recharge

	Power		Power		5		5
	Red/↑		Red / Netflix / Search		6		6
	Green/↓		Green / APP / Repeat		7		7
	Yellow		Yellow / YouTube / Repeat		8		8
	Blue		Blue / Prime Video / Random		9		9
	[≡]		Text / Goto		FAV		Fav / Marker / PC
	[≡x]		Exit / Cancel / Clear		0		0
	EPG		Guide / EPG / -/--		Tv/DTV		TV/Radio /
	[*]/[■]		Zoom / Size		Vol-		Vol-
	Screen		Picture / Format		Vol+		Vol+
	Lang		Audio / Lang I/II		Mute		Mute / Dimmer
	Subtitle		Subtitle / EQ		PR-		CH- / Page-
	Sleep		Sleep / Timer		PR+		CH+ / Page+
	1		1		Preset		Smart / List
	2		2		Source		AV / Input / RDS
	3		3		Info/[≡?]		Info / Angle
	4		4		Swap/Recall		Display / Media

	Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	M		Menu / Home

- <https://tout-telecommandes.fr/fr/1037837-18342-teleco-pour-RC1810-30063516.html>

Documents / Resources



[Mandis RC1810 Remote Control](#) [pdf] Instructions
30063516, RC1810 Remote Control, RC1810, Remote Control, Control, Remote

References

-  [Télécommande qui remplace RC1810 \(30063516\)](#)
- [User Manual](#)