



Mandis RC18T1-27 BOSE Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis RC18T1-27 BOSE Remote Control Instruction Manual 

Contents

- [1 Mandis RC18T1-27 BOSE Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Additional Functions](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis RC18T1-27 BOSE Remote Control



Product Information

Specifications

- Product Name: BOSE RC18T1-27
- Compatibility: Works with BOSE devices
- Dimensions: Not specified
- Weight: Not specified
- Color: Not specified
- Power Source: Rechargeable battery

Product Usage Instructions



| Original | Recharge | Original | Recharge |
|-------------|-------------------|-------------------|-----------------------------|
| On / Off | Power | Down / Tune - | Down |
| Mute All | Audio / Lang I/II | Exit | Exit / Cancel / Clear |
| Mute | Mute / Dimmer | Track/Chap./CH + | CH+ / Page+ |
| CD-DVD | Shift + 3 | Volume + | Vol+ |
| FM-AM | Shift + 6 | Track/Chap./CH - | CH- / Page- |
| AUX | Shift + 7 | Volume - | Vol- |
| TV | Shift + 1 | Stop | Stop / Hold |
| CBL-SAT | Shift + 0 | Pause | Pause / Step / Freeze |
| VCR | Shift + 4 | Play | Play / Slow |
| Up / Tune + | Up | I<< / Seek - | I<< / Preset- |
| DVD Menu | D.Menu / Top | I<< / Seek - | << / Tune- |
| Settings | Setup / OPT / | >> / Seek + | >> / Tune+ |
| Left | Left | >> / Seek + | >> / Preset+ |
| Enter | OK | Shuffle / Presets | Red / Netflix / Search |
| Right | Right | Repeat / Presets | Blue / Prime Video / Random |
| Guide | Guide / EPG / -/- | 1 | 1 |
| System | Menu / Home | 2 | 2 |



| Original | Recharge |
|----------|--------------|
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Info | Info / Angle |

Power On / Off and Mute Functions

To turn on the device, press the “Power” button. To turn it off, press and hold the “Power” button until the device powers down. To mute the audio, press the “Mute” button. To unmute, press the “Mute” button again.

Navigation and Menu Controls

The remote control features various navigation and menu controls:

- “Up / Tune +” button: Use this button to move up or tune to the next channel or track.
- “Down / Tune Exit” button: Use this button to move down or exit from a menu or screen.
- “Left” and “Right” buttons: Use these buttons to navigate left or right in menus and screens.
- “Enter” button: Press this button to confirm selections or enter a menu.

- “Menu / Home” button: Use this button to access the main menu or return to the home screen.
- “Guide / EPG” button: Press this button to access the electronic program guide or TV guide.
- “DVD Menu Settings” button: Use this button to access the DVD menu settings.

Audio and Language Controls

The remote control allows you to control audio and language settings:

- “Audio / Lang I/II” button: Use this button to switch between audio tracks or languages.
- “Mute / Dimmer” button: Press this button to mute the audio or adjust the display brightness.

Additional Functions

The remote control offers additional functions:

- “Shift + [number]” buttons: These buttons provide additional features or shortcuts when used in combination with the “Shift” button.
- “Track/Chap./CH +”, “Track/Chap./CH -”, “Volume +”, and “Volume -” buttons: Use these buttons to control track or chapter selection, channel changing, and volume adjustment.
- “Stop / Hold”, “Pause / Step / Freeze”, and “Play / Slow I” buttons: These buttons control playback functions such as stopping, pausing, stepping, freezing, and playing.
- “Shuffle / Presets” and “Preset+” buttons: These buttons allow you to shuffle playback or access presets.
- “Red / Netflix / Search” and “Blue / Prime Video / Random” buttons: These buttons provide additional functionality related to streaming services or random playback.

FAQ

Q: Where can I find a replacement remote control for BOSE RC18T1-27?


A: You can find a replacement remote control for BOSE RC18T1-27 at the following website:

[Replacement Remote Control for BOSE RC18T1-27](https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html)

BOSE RC18T1-27

<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>

Documents / Resources

| | |
|---|---|
|  | <p>Mandis RC18T1-27 BOSE Remote Control [pdf] Instruction Manual RC18T1-27 BOSE Remote Control, RC18T1-27, BOSE Remote Control, Remote Control, Control</p> |
|---|---|

References

-  [Télécommande qui remplace BOSE RC18T1-27](#)
- [User Manual](#)