




Mandis RC18T1-27 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC18T1-27 Remote Control Instructions 

Contents

- [1 Mandis RC18T1-27 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Mandis RC18T1-27 Remote Control



Product Information

Specifications

- **Model:** BOSE RC18T1-27
- **Compatibility:** CD-DVD, FM-AM, AUX, TV, CBL-SAT, VCR
- **Power Source:** Rechargeable battery
- **Colour:** Black
- **Dimensions:** N/A
- **Weight:** N/A

Product Usage Instructions

Power On/Off

To turn the device on or off, press the “Power” button located on the remote control.

Mute Function

To mute or unmute the audio, press the “Mute” button. The “Mute” function can be applied to all sources or specific sources such as CD-DVD, FM-AM, AUX, TV, CBL-SAT, and VCR.

Navigation and Menu Controls

The remote control provides various navigation and menu controls:

- **Up / Tune +:** Use these buttons to navigate upwards or tune to the next available option.
- **Left / Right / Enter:** Use these buttons to navigate left or right and confirm selections.
- **Guide / EPG / -/—:** Use this button to access the electronic program guide or display “-” or “—” symbols.
- **Menu / Home:** Press this button to access the main menu or return to the home screen.
- **D. Menu / Top:** Use this button to access the detailed menu or go to the top of a list.
- **Exit / Cancel / Clear:** Press this button to exit from a menu or cancel an action.

Audio and Language Controls

The remote control offers audio and language controls:

- **Audio / Lang I/II:** Use these buttons to switch between different audio tracks or languages.
- **Mute / Dimmer:** Press this button to mute the audio or adjust the brightness level.

Other Controls

The remote control includes additional controls:

- **Shift + 3:** Perform a specific function.
- **Shift + 6:** Perform a specific function.
- **Shift + 7:** Perform a specific function.
- **Shift + 1:** Perform a specific function.
- **Shift + 0:** Perform a specific function.
- **Shift + 4:** Perform a specific function.
- **Track/Chap./CH +:** Use these buttons to navigate between tracks, chapters, or channels.
- **Volume + / -:** Adjust the volume level.
- **Stop / Hold:** Press this button to stop playback or hold a specific action.
- **Pause / Step / Freeze:** Use this button to pause playback, step-through frames, or freeze an image.
- **Play / Slow I / Tune+ >>I / Preset+:** Press this button to play, slow down playback, tune to the next available option, or access presets.
- **Red / Netflix / Search:** Use this button to perform a specific function related to Netflix or initiate a search.
- **Blue / Prime Video / Random:** Use this button to perform a specific function related to Prime Video or activate random playback.

Frequently Asked Questions (FAQ)

Q: How do I change the batteries of the remote control?

- **A:** The remote control is rechargeable. To recharge it, connect it to a power source using the provided charging cable.

Q: Can I use this remote control with other devices?

- **A:** The BOSE RC18T1-27 remote control is designed specifically for use with compatible BOSE devices. It may not work with other devices.

Q: Where can I find a replacement for the BOSE RC18T1-27 remote control?

- **A:** You can find a replacement for the BOSE RC18T1-27 remote control on the following website: Replacement Remote Control for BOSE RC18T1-27.

OVERVIEW



Original	Recharge
On / Off	Power
Mute All	Audio / Lang I/II
Mute	Mute / Dimmer
CD-DVD	Shift + 3
FM-AM	Shift + 6
AUX	Shift + 7
TV	Shift + 1
CBL-SAT	Shift + 0
VCR	Shift + 4
Up / Tune +	Up
DVD Menu	D.Menu / Top
Settings	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Guide	Guide / EPG / -/
System	Menu / Home

Original	Recharge
Down / Tune -	Down
Exit	Exit / Cancel / Clear
Track/Chap./CH +	CH+ / Page+
Volume +	Vol+
Track/Chap./CH -	CH- / Page-
Volume -	Vol-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
I<< / Seek -	I<< / Preset-
I<< / Seek -	<< / Tune-
>>I / Seek +	>>I / Preset+
>>I / Seek +	>> / Tune+
Shuffle / Presets	Red / Netflix / Search
Repeat / Presets	Blue / Prime Video / Random
1	1
2	2



