



Mandis RC18T1-27 Remote Control Instructions

[Home](#) » [Mandis](#) » **Mandis RC18T1-27 Remote Control Instructions** 

Mandis RC18T1-27 Remote Control Instructions



Contents

- [1 Remote Control Using Instructions](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Remote Control Using Instructions



Original	Recharge
	Power
	Audio / Lang I/II
	Mute / Dimmer
	Shift + 3
	Shift + 6
	Shift + 7
	Shift + 1
	Shift + 0
	Shift + 4
	Up
	D.Menu / Top
	Setup / OPT /
	Left
	OK
	Right
	Guide / EPG / -/-
	Menu / Home

Original	Recharge
	Down
	Exit / Cancel / Clear
	CH+ / Page+
	Vol+
	CH- / Page-
	Vol-
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	I<< / Preset-
	I<< / Tune-
	I>> / Preset+
	I>> / Tune+
	Red / Netflix / Search
	Blue / Prime Video / Random
	1
	2



	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle



<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>



Documents / Resources



[Mandis RC18T1-27 Remote Control](#) [pdf] Instructions
RC18T1-27 Remote Control, RC18T1-27, Remote Control, Control

References

- [M Télécommande qui remplace BOSE RC18T1-27](#)
- [User Manual](#)