




Mandis RC18T1-27 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC18T1-27 Remote Control Instructions 

Contents

- [1 Mandis RC18T1-27 Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 REPLACEMENT PARTS](#)
- [6 REMOTE DESCRIPTION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Mandis

Mandis RC18T1-27 Remote Control Instructions



Product Information

The BOSE RC18T1-27 is a remote control designed for controlling various devices such as CD-DVD players, FM-AM radios, TVs, cable or satellite boxes, VCRs, and more. It features a range of buttons and functions to provide convenient control over your entertainment system. The remote control is compatible with multiple BOSE products.

Specifications

- Model: RC18T1-27
- Compatibility: BOSE products
- Power Source: Rechargeable battery
- Color: Black
- Dimensions: [Insert dimensions]

Product Usage Instructions

Power On/Off and Mute

To power on the device, press the “On” button. To power off the device, press the “Off” button. To mute the audio, press the “Mute” button.

Device Selection and Control

To select a specific device and control its functions, use the corresponding buttons on the remote control. For example:

- To control the CD-DVD player, press the “CD-DVD” button.
- To control the FM-AM radio, press the “FM-AM” button.
- To control the TV, press the “TV” button.
- To control the cable or satellite box, press the “CBL-SAT” button.
- To control the VCR, press the “VCR” button.

Navigation and Settings

The remote control provides various navigation and settings options:

- Use the arrow buttons (Up, Down, Left, Right) to navigate through menus and options.
- Press the “Enter” button to confirm selections.
- Use the “Menu” button to access the main menu or home screen.
- Press the “Guide” button for electronic program guide or additional information.
- Use the “Settings” button to access device settings.

Volume and Playback Control

To adjust the volume, use the “Volume +” and “Volume -” buttons. To control playback, use the following buttons:

- “Stop” button to stop playback.
- “Pause” button to pause playback.
- “Play” button to resume playback.
- “Track/Chap./CH +” button to skip to the next track or chapter.
- “Track/Chap./CH -” button to skip to the previous track or chapter.

FAQ

- Q: How do I change the batteries?
- A: The BOSE RC18T1-27 remote control features a rechargeable battery. To recharge the battery, connect the remote control to a power source using the provided charging cable. It is not necessary to replace the batteries.
- Q: Is the remote control compatible with other brands?
- A: The BOSE RC18T1-27 remote control is specifically designed for use with BOSE products and may not be compatible with devices from other brands.

OVERVIEW

BOSE RC18T1-27




 



 








 





 



 



 











 
 


 

 



REPLACEMENT PARTS

Original

Recharge

	On / Off		Power
	Mute All		Audio / Lang I/II
	Mute		Mute / Dimmer
	CD-DVD		Shift + 3
	FM-AM		Shift + 6
	AUX		Shift + 7
	TV		Shift + 1
	CBL-SAT		Shift + 0
	VCR		Shift + 4
	Up / Tune +		Up
	DVD Menu		D.Menu / Top
	Settings		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Guide		Guide / EPG / -/-
	System		Menu / Home



	Down / Tune -		Down
	Exit		Exit / Cancel / Clear
	Track/Chap./CH +		CH+ / Page+
	Volume +		Vol+
	Track/Chap./CH -		CH- / Page-
	Volume -		Vol-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<< / Seek -		I<< / Preset-
	I<< / Seek -		<< / Tune-
	>>I / Seek +		>> / Tune+
	>>I / Seek +		>>I / Preset+
	Shuffle / Presets <--		Red / Netflix / Search
	Repeat / Presets -->		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle

REMOTE DESCRIPTION



<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>

Documents / Resources

	<p>Mandis RC18T1-27 Remote Control [pdf] Instructions RC18T1-27 Remote Control, RC18T1-27, Remote Control, Control</p>
	<p>Mandis RC18T1-27 Remote Control [pdf] Instructions RC18T1-27 Remote Control, RC18T1-27, Remote Control, Control</p>

References

- [M Télécommande qui remplace BOSE RC18T1-27](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)