



Mandis RC18T1-27 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC18T1-27 Replacement Remote Control Instructions 

Contents

- [1 Mandis RC18T1-27 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 FAQ](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Mandis RC18T1-27 Replacement Remote Control



Product Information



Original	Recharge
On / Off	Power
Mute All	Audio / Lang I/II
Mute	Mute / Dimmer
CD-DVD	Shift + 3
FM-AM	Shift + 6
AUX	Shift + 7
TV	Shift + 1
CBL-SAT	Shift + 0
VCR	Shift + 4
Up / Tune +	Up
DVD Menu	D.Menu / Top
Settings	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Guide	Guide / EPG / -/-
System	Menu / Home

Original	Recharge
Down / Tune -	Down
Exit	Exit / Cancel / Clear
Track/Chap./CH +	CH+ / Page+
Volume +	Vol+
Track/Chap./CH -	CH- / Page-
Volume -	Vol-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
I<< / Seek -	I<< / Preset-
I<< / Seek -	I<< / Tune-
I>> / Seek +	I>> / Tune+
I>> / Seek +	I>> / Preset+
Shuffle / Presets	Red / Netflix / Search
Repeat / Presets	Blue / Prime Video / Random
1	1
2	2

Specifications

- Model: BOSE RC18T1-27
- Compatibility: CD-DVD, FM-AM, AUX, TV, CBL-SAT, VCR
- Power Source: Rechargeable battery
- Power: On/Off button
- Audio/Language: I/II button
- Mute/Dimmer: Mutes the audio and adjusts the brightness level
- Additional Buttons: Up/Tune +, DVD Menu, Settings, Left, Enter, Right, Guide, System, D.Menu/Top, Setup/Output, Defaults, OK, Down/Tune Exit, Track/Chap./CH +, Volume +, Stop, Pause, Play, Seek +, Shuffle/Preset, Red/Netflix/Search, Blue/Prime Video/Random, Info/Angle

[illegible]

Power On/Off

To turn the device on or off, press the Power button.

Muting Audio

To mute the audio, press the Mute button. Press it again to unmute.

Selecting Source

To select a specific source (CD-DVD, FM-AM, AUX, TV, CBL-SAT, VCR), press the corresponding button.

Adjusting Volume

To adjust the volume level, use the Volume + and Volume – buttons.

Navigating Menus

To navigate menus and settings, use the Up/Tune +, Left, Right, and Down/Tune Exit buttons.

Accessing DVD Menu

To access the DVD menu, press the DVD Menu button.

Changing Settings

To change settings, use the Settings button.

Accessing Guide/EPG

To access the guide or electronic program guide (EPG), press the Guide button.

System Setup

To access the system setup, press the System button.

FAQ

Q: How do I replace the rechargeable battery?

A: Please refer to the user manual or contact customer support for instructions on replacing the rechargeable battery.

Q: Where can I find a replacement remote control?

A: You can find a replacement remote control for the BOSE

Documents / Resources

	Mandis RC18T1-27 Replacement Remote Control [pdf] Instructions RC18T1-27 Replacement Remote Control, RC18T1-27, Replacement Remote Control, Remote Control, Control
	Mandis RC18T1-27 Replacement Remote Control [pdf] Instructions RC18T1-27 Replacement Remote Control, RC18T1-27, Replacement Remote Control, Remote Control, Control
	Mandis RC18T1-27 Replacement Remote Control [pdf] Instructions RC18T1-27 Replacement Remote Control, RC18T1-27, Replacement Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace BOSE RC18T1-27](#)
- [User Manual](#)