




Mandis RC1910 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC1910 Remote Control Instructions 

Contents

- [1 Mandis RC1910 Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



Mandis RC1910 Remote Control



Product Information

Specifications

- Model: RC1910
- Pages: 2
- Source:

<https://tout-telecommandes.fr/fr/1038799-18924-telecommande-de-remplacement-pour-RC-1910-30070046.html>

Product Usage Instructions



Original	Recharge	Original	Recharge
	Power		Power
	Sleep		Sleep / Timer
	Screen		Picture / Format
	Presets		Setup / OPT /
	TV/Radio /		TV/Radio /
	FAV		Shift + Fav / Marker / PC
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	TXT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/-
	0		0
	Swap		Fav / Marker / PC
	Photo/Music/Movi		D.Menu / Top
	World		Smart / List
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	C		Exit / Cancel / Clear
	Disp.		Display / Media
	Search Mode		Shift + Red / Netflix /
	Return		Back / Return



Original	Recharge	Original	Recharge
	CH+ / Page+		Yellow / YouTube / Repeat
	Info / Angle		Blue / Prime Video / Random
	Vol+		
	CH- / Page-		
	Mute / Dimmer		
	Vol-		
	Rec / Rec Mode		
	Pause / Step / Freeze		
	I<< / Preset-		
	>>I / Preset+		
	<< / Tune-		
	Play / Slow		
	Stop / Hold		
	>> / Tune+		
	Red / Netflix / Search		
	Zoom / Size		
	Green / APP / Repeat		

Power Sleep Screen Presets

To access the power sleep screen presets, press the corresponding number buttons (1 to 8) on the remote control.

Recharge

This button is used for recharging the device. Please refer to the device's manual for specific instructions on how to recharge.

Power Sleep / Timer Picture / Format Setup / OPT / TVT / RoadIsio

These buttons are used to control various settings related to power sleep, timer, picture, format setup, and options. Please refer to the device's manual for detailed instructions on using these functions.

Shift + Fav

Pressing the Shift and Fav buttons together allows you to access additional features or functions. Please consult the device's manual for specific instructions on using this combination.

+ Progra/mMarker / PC

These buttons are used for programming and marking favorite channels or for accessing PC-related functions. Please refer to the device's manual for detailed instructions on using these buttons.

Audio / Lang I/II Subtitle / EQ Text / Goto

These buttons control various audio settings, language options, subtitles, equalizer settings, and navigation. Please consult the device's manual for specific instructions on using these functions.

9 EPG / 0 Swap Photo/Music/Movie World Source Menu

Pressing the 9 button allows you to access the EPG (Electronic Program Guide), while pressing the 0 button swaps between different media sources such as photo, music, and movies. Please refer to the device's manual for detailed instructions on using these functions.

Up Left OK Right Down

These directional buttons are used for navigating menus and options. Use the Up, Left, Right, and Down buttons to move within the menu and press OK to confirm a selection.

Disp. Search Mode Return

These buttons control display settings, search mode, and navigation return. Please consult the device's manual for specific instructions on using these functions.

Menu / Top Smart Menu / List AV / Input / RDS Menu / Home

These buttons provide access to various menus and options such as the device menu, smart menu, AV list, input selection, RDS menu, and home menu. Please refer to the device's manual for detailed instructions on using these functions.

Exit / Cancel / Clear

Pressing any of these buttons allows you to exit or cancel a current operation or clear any input. Please consult the device's manual for specific instructions on using these functions.

Display / Media Shift +

The Display button controls display settings, while pressing Shift and + together provides access to additional features or functions. Please refer to the device's manual for detailed instructions on using these buttons.

Red / Netflix / Search

The Red button has different functions depending on the context. It can be used for specific actions related to Netflix or for searching content. Please consult the device's manual for specific instructions on using these functions.

Back / Return

Pressing the Back or Return button allows you to go back or return to the previous menu or screen. Please refer to the device's manual for detailed instructions on using these functions.

CH+ Info Vol+ CHMute VolRec Pause I>I > Red//Zoom Red//Zoom Green//Repeat

These buttons control channel selection, volume adjustment, muting, recording, pause, step, freeze, preset selection, tune, zoom, and repeat functions. Please consult the device's manual for specific instructions on using these buttons.

Yellow/Root Blue/Title

The Yellow button has a specific function related to the root, while the Blue button has a function related to titles. Please refer to the device's manual for detailed instructions on using these buttons.

Frequently Asked Questions (FAQ)

Q: Where can I find a replacement for RC1910 remote control?

A: You can find a replacement for the RC1910 remote control at the following source:

[RC1910 Replacement Remote Control](#). Please visit the provided link for more information.

Documents / Resources



[Mandis RC1910 Remote Control](#) [pdf] Instructions
RC1910 Remote Control, RC1910, Remote Control, Control

References

- [Télécommande qui remplace RC 1910 \(30070046\)](#)
- [User Manual](#)