

Mandis RC19532018-01 Philips Remote Control



# Mandis RC19532018-01 Philips Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC19532018-01 Philips Remote Control Instructions 

## Contents

- [1 Mandis RC19532018-01 Philips Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
  - [4.1 OVERVIEW](#)
  - [4.2 BUTTON FUNCTION](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



**Mandis RC19532018-01 Philips Remote Control**



## Product Information

### Specifications

- Model: Philips RC19532018-01
- Power Source: Rechargeable Battery
- Supported Media: Power Tuner, AUX, Tape, USB, CD1, CD2, CD3
- Features: USB Record, USB Delete, Volume Control, Play/Pause Control, Title Control, Stop Control
- Color Options: Power Red, Green, Yellow, Blue
- Dimensions: Not specified

### Product Usage Instructions

#### Power On/Off

To turn on the Philips RC19532018-01 remote control, press the “Power” button. To turn it off, press and hold the “Power” button until the device powers down.

#### Media Control

The remote control supports various media sources. Use the corresponding buttons to select the desired media:

- “Power Tuner” for power tuner control
- “AUX” for auxiliary input control
- “Tape” for tape control
- “USB” for USB input control
- “CD1”, “CD2”, “CD3” for CD control

### **USB Record/Delete**

To record audio onto a connected USB device, press the “USB Record” button. To delete files from the USB device, press the “USB Delete” button.

### **Volume Control**

Adjust the volume level by using the “Vol/Vol+” buttons to increase or decrease the volume.

### **Playback Control**

Control the playback of media using the following buttons:

- “Play/Pause” to start or pause playback
- “Stop” to stop playback

### **Color Selection**

The Philips RC19532018-01 remote control is available in four different colors: Power Red, Green, Yellow, and Blue. Choose the desired color option when purchasing the remote control.

### **Frequently Asked Questions**

- Q: Can this remote control be used with a TV?  
A: No, this remote control is not designed for TV control.
- Q: Where can I find a replacement for the Philips RC19532018-01 remote control?  
A: You can find a replacement for this remote control on the following website: [Replacement Remote Control for Philips RC19532018-01](#)

### **OVERVIEW**





## BUTTON FUNCTION

## Original

## Recharge

|                                                                                     |            |                                                                                     |        |
|-------------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|--------|
|    | Power      |    | Power  |
|    | Tuner      |    | Red    |
|    | AUX        |    | Green  |
|    | Tape       |    | Yellow |
|    | USB        |    | Blue   |
|    | CD1        |    | 1      |
|    | CD2        |    | 2      |
|    | CD3        |    | 3      |
|    | USB Record |    | Rec    |
|    | USB Delete |    | Exit   |
|    | Vol-       |    | Vol -  |
|    | Vol+       |    | Vol +  |
|   | I</Title   |   | I<<    |
|  | >I/Title   |  | >>I    |
|  | Stop       |  | Stop   |
|  | Play/Pause |  | Play   |
|  | Play/Pause |  | Pause  |

|                                                                                     |              |                                                                                                                                                                       |               |
|-------------------------------------------------------------------------------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
|     | <</Album     |                                                                                       | <<            |
|    | >>/Album     |                                                                                      | >>            |
|    | DSC          |                                                                                      | Up            |
|    | IS           |                                                                                      | Left          |
|    | RDS/News     |                                                                                      | Right         |
|    | DIM          |                                                                                      | Down          |
|    | Prog         |  +  | Shift + Sleep |
|    | Repeat       |                                                                                      | Text          |
|    | Shuffle      |                                                                                      | TV/R          |
|    | Display      |                                                                                      | Info          |
|    | Sleep        |                                                                                      | Sleep         |
|    | Clock Timer  |  +  | Shift + AV    |
|    | Timer On/Off |                                                                                      | AV            |
|   | Mute         |                                                                                     | Mute          |
|  | DBB          |                                                                                    | Media         |
|  | Max          |                                                                                    | Smart         |
|                                                                                     |              |                                                                                                                                                                       |               |

<https://tout-telecommandes.fr/fr/Philips/1062324-24743-telecommande-de-remplacement-pour-Philips-RC19532018-01-996510001306.html>

## Documents / Resources

|                                                                                     |                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><a href="#">Mandis RC19532018-01 Philips Remote Control</a> [pdf] Instructions</p> <p>RC19532018-01 Philips Remote Control, RC19532018-01, Philips Remote Control, Remote Control, Control</p> |
|  | <p><a href="#">Mandis RC19532018-01 Philips Remote Control</a> [pdf] Instructions</p> <p>RC19532018-01 Philips Remote Control, RC19532018-01, Philips Remote Control, Remote Control, Control</p> |
|  | <p><a href="#">Mandis RC19532018-01 Philips Remote Control</a> [pdf] Instructions</p> <p>RC19532018-01 Philips Remote Control, RC19532018-01, Philips Remote Control, Remote Control, Control</p> |

## References

-  [Télécommande qui remplace PHILIPS RC19532018/01 \(996510001306\)](#)
- [User Manual](#)