



Mandis RC19532018-01 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC19532018-01 Remote Control Instructions 

Contents

- [1 Mandis RC19532018-01 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Product Overview](#)
- [5 Remote Using Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Mandis RC19532018-01 Remote Control



Product Information

Specifications

- **Model:** Philips RC19532018-01
- **Power Source:** Rechargeable Battery
- **Supported Devices:** Power Tuner, AUX, Tape, USB, CD1, CD2, CD3
- **Controls:** Power, Vol, Vol+, II/Title, Stop, Play/Pause
- **Color Options:** Red, Green, Yellow, Blue
- **Additional Features:** USB Record, USB Delete, DSC IS, RDS/News, DIM Prog, Repeat Shuffle, Display,

Sleep Clock Timer, Timer On/Off, Mute, DBB Max

FAQ

- **Q:** Where can I find a replacement remote control for Philips RC19532018-01?
 - **A:** You can find a replacement remote control for Philips RC19532018-01 [here](#).

Product Usage Instructions

Powering On/Off

- To power on the device, press the “Power” button. To power off the device, press and hold the “Power” button until the device turns off.

Controlling Volume

- To adjust the volume level, use the “Vol” buttons. Press the “Vol+” button to increase the volume and the “Vol” button to decrease the volume.

Playback Controls

- To play or pause a media file, press the “Play/Pause” button. To stop playback, press the “Stop” button.

Changing Tracks or Titles

- To change tracks or titles on supported devices (CDs, USB), use the “II/Title” button. Press it to skip to the next track or title and press and hold it to skip to the previous track or title.

Recording and Deleting from USB

- If your device supports USB recording, use the “USB Record” button to start recording. To delete files from the USB, use the “USB Delete” button.

Recharging the Device

- To recharge the device, connect it to a power source using the provided charging cable. The device will automatically start charging.

Product Overview



Remote Using Instructions

Original / Recharge

	Power		Power		<</Album		<<
	Tuner		Red		>>/Album		>>
	AUX		Green		DSC		Up
	Tape		Yellow		IS		Left
	USB		Blue		RDS/News		Right
	CD1		1		DIM		Down
	CD2		2		Prog		Shift + Sleep
	CD3		3		Repeat		Text
	USB Record		Rec		Shuffle		TV/R
	USB Delete		Exit		Display		Info
	Vol-		Vol -		Sleep		Sleep
	Vol+		Vol +		Clock Timer		Shift + AV
	I</Title		I<<		Timer On/Off		AV
	>I/Title		>>I		Mute		Mute
	Stop		Stop		DBB		Media
	Play/Pause		Play		Max		Smart
	Play/Pause		Pause				

<https://tout-telecommandes.fr/fr/Philips/1062324-24743-telecommande-de-remplacement-pour-Philips-RC19532018-01-996510001306.html>

Documents / Resources

	Mandis RC19532018-01 Remote Control [pdf] Instructions RC19532018-01, RC19532018-01 Remote Control, Remote Control, Control
	Mandis RC19532018-01 Remote Control [pdf] Instructions RC19532018-01 Remote Control, RC19532018-01, Remote Control, Control
	Mandis RC19532018-01 Remote Control [pdf] Instructions RC19532018-01 Remote Control, RC19532018-01, Remote Control, Control
	Mandis RC19532018-01 Remote Control [pdf] Instructions RC19532018-01 Remote Control, RC19532018-01, Remote Control, Control
	Mandis RC19532018-01 Remote Control [pdf] Instructions RC19532018-01 Remote Control, RC19532018-01, Remote Control, Control
	Mandis RC19532018-01 Remote Control [pdf] Instructions RC19532018-01 Remote Control, RC19532018-01, Remote Control, Control

References

- [Télécommande qui remplace PHILIPS RC19532018/01 \(996510001306\)](#)
- [User Manual](#)