



Mandis RC2440 Original Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis RC2440 Original Remote Control Instruction Manual 

Contents

- [1 Mandis RC2440 Original Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 REPLACEMENT PARTS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Mandis RC2440 Original Remote Control



Product Information

The PP Power is a remote control device designed to operate various electronic devices such as TVs, radios, and AV equipment. It is a replacement remote control model RC2440 and can be purchased from: all-remote-controls.co.uk.

Specifications

- Model: RC2440
- Compatibility: Works with various electronic devices including TVs, radios, and AV equipment
- Power: Requires 2 AAA batteries (not included)

Product Usage Instructions

• Power On/Off

To turn on or off your electronic device, locate the “Power” button on the remote control. Press the button once to turn on the device and press it again to turn it off.

• Channel Selection

To change channels, use the numbered buttons (1-9) on the remote control. Press the corresponding number for the desired channel. For channels with double digits, press the first digit followed by the second digit.

• Volume Control

To adjust the volume of your device, use the “Volume +” and “Volume -” buttons on the remote control. Press

the “Volume +” button to increase the volume and the “Volume -” button to decrease it.

- **TV/Radio/AV Mode**

To switch between TV, radio, and AV modes, locate the corresponding buttons on the remote control. Press the “TV/Radio” button to switch to TV mode, the “Radio” button to switch to radio mode, and the “AV” button to switch to AV mode.

- **Preset Selection**

If your device has preset channels, use the “Preset+” button to cycle through them. Each press of the button will switch to the next preset channel.

- **Additional Features**

The remote control may have additional features such as PiP (Picture-in-Picture), RDS (Radio Data System), and other advanced functions. Please refer to your device’s user manual for more information on utilizing these features.

FAQ

- **How do I replace the batteries?**

To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and remove the old batteries. Insert two new AAA batteries, making sure to match the polarity markings. Close the compartment securely.

- **Can I program this remote control for other devices?**

No, this remote control is designed specifically for use with the RC2440 model and is not programmable for other devices.

- **Where can I purchase a replacement remote control?**

You can purchase a replacement remote control model RC2440 from: all-remote-controls.co.uk.

REPLACEMENT PARTS



Documents / Resources



[Mandis RC2440 Original Remote Control](#) [pdf] Instruction Manual
RC2440 Original Remote Control, RC2440, Original Remote Control, Remote Control, Control

References

- [M Replacement remote control for RC 2440 \(08005189\)](#)
- [User Manual](#)