



Mandis RC2440 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC2440 Replacement Remote Control Instructions 



[RC2440](#)

Contents

- [1 RC2440 Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

RC2440 Replacement Remote Control



Original	Replacement
PP	BACK Back / Return
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
Menu [M]	Menu / Home
Info [i]	Info / Angle
I-II	Audio / Lang I/II

Original	Replacement
Mute	Mute / Dimmer
Left	Left
Up	Up
Right	Right
OK	OK
Down	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
Red / Sound	Red / Netflix / Search
Red / Sound	Sound / Title
Green / Picture	Green / APP / Repeat
Green / Picture	Picture / Format
Yellow / Feature	Yellow / YouTube / Repeat
Blue / Install	Blue / Prime Video / Random
Text	Text / Goto




Original	Replacement
[=0]	SLEEP Sleep / Timer
Hold	STOP Stop / Hold
[≡X]	EXIT Exit / Cancel / Clear
Mix / PIP Swap	SMART Smart / List
PIP / Size	SIZE Zoom / Size
PIP Down / [≡?]	PRESET- I<< / Preset-
PIP Up / Index	PRESET+ >>I / Preset+
[TV]	PROGRAM TV/Radio /
[AV]	RDS AV / Input / RDS

Original	Replacement
----------	-------------



<https://all-remote-controls.co.uk/en/1059041-19075-replacement-remote-control-for-RC-2440-08005189.html>

Documents / Resources

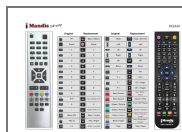

[Mandis RC2440 Replacement Remote Control](#) [pdf] Instructions

RC2440 Replacement Remote Control, RC2440, Replacement Remote Control, Remote Control

References

- [M Replacement remote control for RC 2440 \(08005189\)](#)
- [User Manual](#)