

Mandis RC2444601-01 AOC Remote Control Instructions

Contents

1 AOC RC2444601-01

2 Documents / Resources

2.1 References

3 Related Posts



[AOC RC2444601-01](#)



Original	Replacement
----------	-------------

	Input		AV / Input / RDS
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / --
	0		0
	Recall		Back / Return

	[+]		Display / Media
	Menu/Exit		Exit / Cancel / Clear
	Menu/Exit		Menu / Home
	Vol+		Vol+
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	CH-		CH- / Page-
	Down		Down
	FAV		Fav / Marker / PC
	CH List		Smart / List
	I/II	 + 	Shift + Audio / Lang I/II

	Sleep		Sleep / Timer
	USB		Shift + 8
	Audio		Audio / Lang I/II
	Video		Shift + 4
	Info		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Teletext		Text / Goto
	Mix		Shift + Text /
	Size		Zoom / Size
	Subpage		Rec / Rec Mode
	Index		Pause / Step / Freeze

	Subtitel		Subtitle / EQ
	Hold		Stop / Hold
	Reveal		Play / Slow



<https://all-remote-controls.co.uk/en/AOC/1060120-82223-replacement-remote-control-for-AOC-RC2444601-01-098GRABDPNTACR.html>



[Mandis RC2444601-01 AOC Remote Control](#) [pdf] Instructions

RC2444601-01 AOC Remote Control, RC2444601-01, AOC Remote Control, Remote Control, Control

References

- [M Replacement remote control for AOC RC2444601-01 \(098GRABDPNTACR\)](#)
- [User Manual](#)