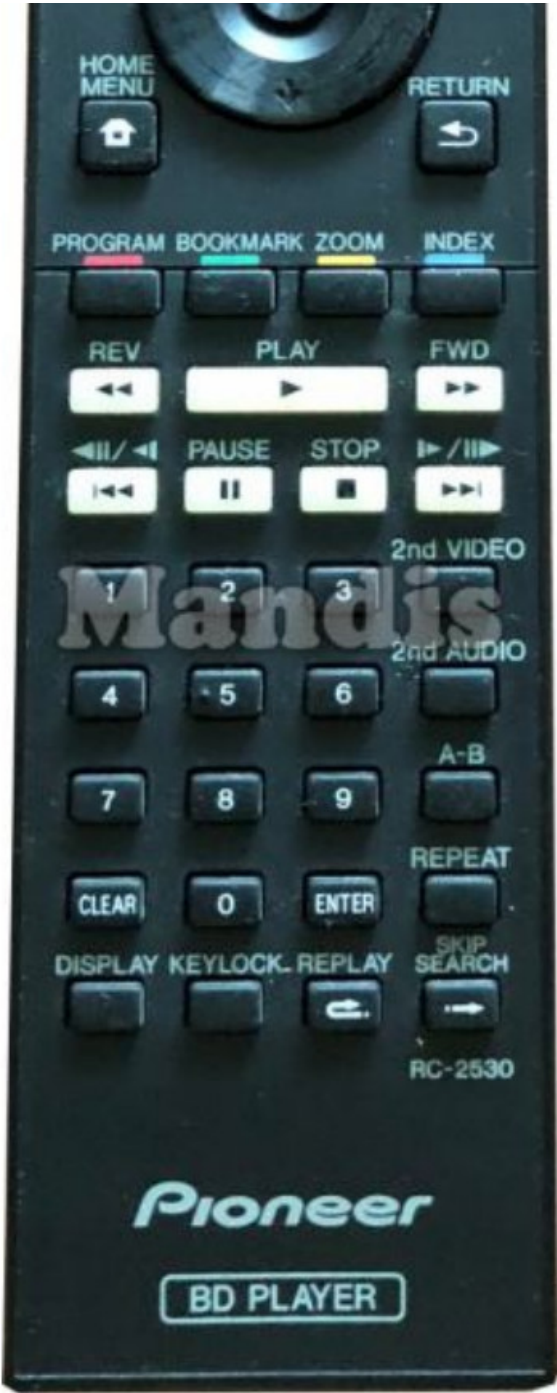 




Mandis RC2530 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC2530 Replacement Remote Control Instructions 



 
 
 


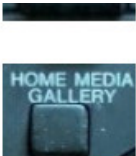 
Contents

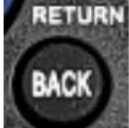 
- [1 RC2530 Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

 
 
 
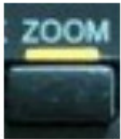 
 
 
 
 
 
 
 
RC2530 Replacement Remote Control

Original		Replacement	
	Power		Power
	Continued		Smart / List
	Open / Close		Eject / Surround

 
 
 
 
           	Audio			Audio / Lang I/II
	Subtitle			Subtitle / EQ
	Angle			Info / Angle
	FL Dimmer			Mute / Dimmer
	CD / SACD			AV / Input / RDS
	HDMI			Shift + 0
	Top Menu			D.Menu / Top
	Function			Menu Shift + Setup /OPT / Tools
	Exit			Exit / Cancel / Clear
	Home Media			Shift +Display / Media
	Menu / Popup			Setup / OPT /
	Menu			Tools
	Up			Up
Down	      +    +   		Down	

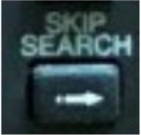 
    	Left	 +     	Left
--	------	---	------

    	Right Enter Home Menu Return Red / Program Green / Bookmark Yellow / Zoom Blue / Index << Play	    	Right OK Menu / Home Back / Return Red / Netflix /Search Green / APP / Repeat Yellow / YouTube / Repeat Blue / Prime Video / Random << / Tune- Play / Slow
---	---	---	---

	>>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+
	1		1
	2		2
			
			
			
			
			
			
			
			
			
			

Original		Replacement	
	3		3

          	2nd Video			Shift + 1
	4		+	
	5			
	6			6
	2nd Audio			Shift +2
	7			7
	8			8
	9			9
	A-B		+	Shift +Yellow /YouTube /
	Clear			Repeat Shift + Exit / Cancel / Clear
	0			0
	Repeat			Shift + Green / APP /
	Display			Display / Media
	Keylock			Text / Goto
	Replay			Vol+
			+	
			+	
				
			+	
				
				
				
				

     	Skip Search		Vol-
--	-------------	--	------





<https://all-remote-controls.co.uk/en/Pioneer/1066544-90733-replacement-remote-control-for-Pioneer-RC2530-06-RC2531-A000.html>



[Mandis RC2530 Replacement Remote Control](#) [pdf] Instructions
RC2530 Replacement Remote Control, RC2530, Replacement Remote Control, Remote Contr
ol

References

- [M Replacement remote control for PIONEER RC2530 \(06-RC2531-A000\)](#)