



Mandis RC2540 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC2540 Remote Control Instructions 

Mandis RC2540 Remote Control Instructions



Contents

1 Overview

2 Button Instruction

3 Documents / Resources

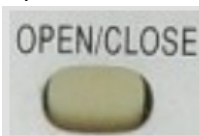 
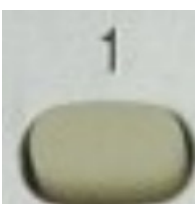 
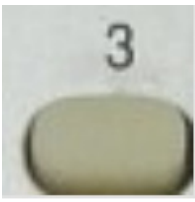 
3.1 References

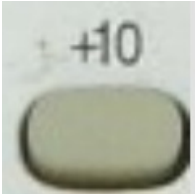 
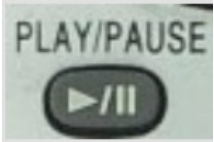 
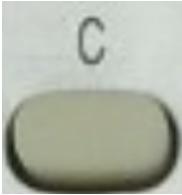 
Overview

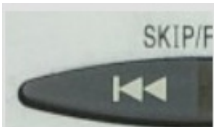 
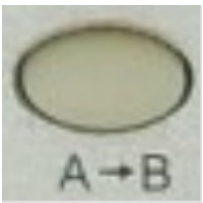 


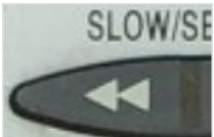 
Button Instruction

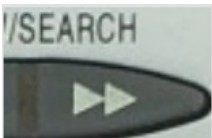 
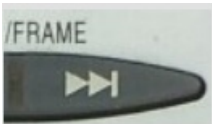 
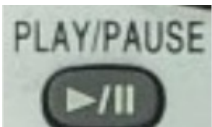 
Original	Replacement
Power 	Power 
Program 	TV/Radio / 

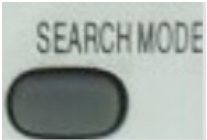 
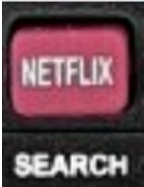 
Open/Close 	Eject / Surround 
1 	1 
2 	2 
3 	3 
4 	4 
5 	5 
6 	6 

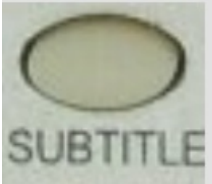 
7 	7 
8 	8 
9 	9 
0 	0 
+10 	Guide / EPG / -/- 
Play 	Play / Slow 
C 	Exit / Cancel / Clear 

I<< Skip/Frame 	I<< / Preset- 
Audio 	Audio / Lang I/II 
Angle 	Info / Angle 
Time 	Sleep / Timer 
Repeat 	Green / APP / Repeat 
A→B 	Yellow / YouTube / Repeat 

Original	Replacement
<< Slow/Search 	<< / Tune 

Slow/Search >> 	>> / Tune+ 
Skip/Frame >>I 	>>I / Preset+ 
Pause 	Pause / Step / Freeze 
Stop 	Stop / Hold 
Title 	Sound / Title 
Menu 	Menu / Home 
Display 	Display / Media 

Search Mode 	Red / Netflix / Search 
Up 	Up 
Down 	Down 
Right 	Right 
Left 	Left 
Select 	OK 
Return 	Back / Return 

Zoom 	Zoom / Size 
Subtitle 	Subtitle / EQ 

Documents / Resources

	Mandis RC2540 Remote Control [pdf] Instructions RC2540 Remote Control, RC2540, Remote Control, Control
--	---

References

-  [Telecomando sostituto di RC 2540 \(30022488\)](#)
- [User Manual](#)