



Mandis RC25E Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC25E Remote Control Instructions 

Contents

- [1 Mandis RC25E Remote Control](#)
- [2 Product Information](#)
- [3 PRODUCT OVERVIEW](#)
- [4 REMOTE USING INSTRUCTIONS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis RC25E Remote Control



Product Information

This product is a remote control for a TV. It is designed to be used as a replacement for the original remote control or as a standby remote control.

Specifications

- **Buttons:** Original, Replacement, Standby, Power, TV, Mute, Mute/Dimmer, Still, 1, 2, 3, 4, 5, 6, 7, 8, 9, 0, Prev., PC, DTV, AV
- **Color Buttons:** Red/P.Mode, Green/S.Mode, Yellow/S.Effect

Product Usage Instructions

Power On/Off

To turn on the TV, press the Power button. To turn off the TV, press the Power button again.

Changing Channels

To change the channel, use the number buttons (1-9) or the number buttons combined with the Favor button. For example:

- To go to channel 5, press the number button 5.
- To go to channel 12, press the number button 1 and then press the number button 2.

Muting the Sound

To mute the sound of the TV, press the Mute button. To unmute the sound, press the Mute button again.

Adjusting the Display

To adjust the display settings, use the Display button and navigate through the available options using the number buttons. Pressing the Display button multiple times may cycle through different display modes.

Changing Input Source

To change the input source of the TV, use the Source button and navigate through the available options using the number buttons. Pressing the Source button multiple times may cycle through different input sources such as TV, PC, DTV, and AV.

Sleep Timer

To set a sleep timer for the TV, press the Sleep button and use the number buttons to enter the desired time in minutes. The TV will automatically turn off after the specified time has elapsed.

Aspect Ratio

To adjust the aspect ratio of the TV, use the Aspect button and navigate through the available options using the number buttons. Pressing the Aspect button multiple times may cycle through different aspect ratios.

FAQ

Q: How do I replace the original remote control with this remote control?

A: To replace the original remote control, simply remove the batteries from the original remote control and insert them into this remote control. Ensure that the batteries are inserted correctly.


Q: How do I use this remote control as a standby remote control?

A: To use this remote control as a standby remote control, ensure that the TV is turned on using the original remote control or the Power button on the TV itself. This remote control can then be used to control the TV functions.

Q: What do the color buttons (Red/P.Mode, Green/S.Mode, Yellow/S.Effect) do?

A: The color buttons are used to access additional modes or effects specific to your TV model. Please refer to your TV's user manual for more information on how to use these buttons.

PRODUCT OVERVIEW

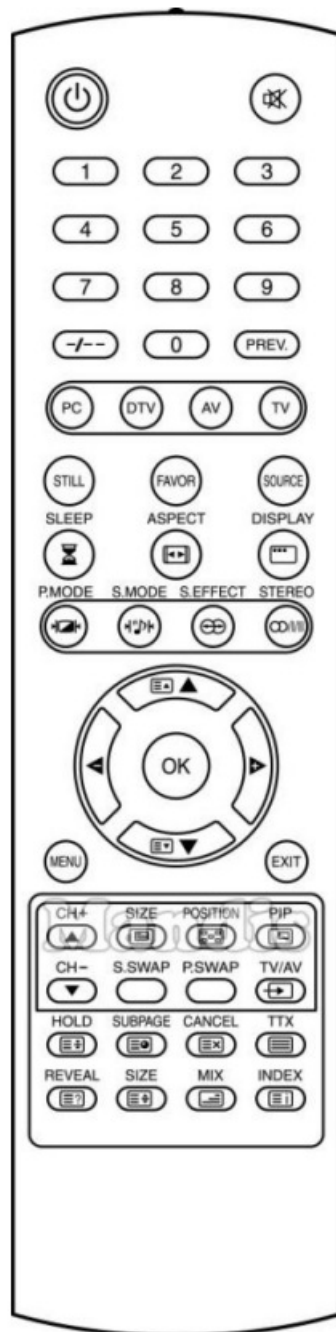

REMOTE USING INSTRUCTIONS

Original / Replacement

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Prev.		I<< / Preset-
	PC		Shift + Fav / Marker / PC
	DTV		Shift + 2
	AV		Shift + 3

	TV		Shift + 1
	Still		Pause / Step / Freeze
	Favor		Fav / Marker / PC
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	Display		Display / Media
	Red / P.Mode		Picture / Format
	Red / P.Mode		Red / Netflix / Search
	Green / S.Mode		Shift + Sound / Title
	Green / S.Mode		Green / APP / Repeat
	Yellow / S.Effect		Sound / Title
	Yellow / S.Effect		Yellow / YouTube / Repeat
	Blue / Stereo		Audio / Lang I/II
	Blue / Stereo		Blue / Prime Video / Random
	Up / CH+		Up
	Up / CH+		CH+ / Page+

	Left / Vol-		Left		Hold		Stop / Hold
	Left / Vol-		Vol-		Subpage		Subtitle / EQ
	OK		OK		Cancel	+	Shift + Exit / Cancel / Clear
	Right / Vol+		Vol+		TTX		Text / Goto
	Right / Vol+		Right		Reveal		D.Menu / Top
	Menu		Menu / Home		Size		Zoom / Size
	Down / CH-		Down		Mix	+	Shift + Text /
	Down / CH-		CH- / Page-		Index		Info / Angle
	Exit		Exit / Cancel / Clear				
	PIP CH+	+	Shift + CH+ /				
	PIP Size	+	Shift + Red / Netflix /				
	PIP Position	+	Shift + Green / APP /				
	PIP		Smart / List				
	PIP CH-	+	Shift + CH- /				
	PIP S.Swap	+	Shift + Blue / Prime				
	PIP P.Swap	+	Shift + Yellow / YouTube /				
	PIP TV/AV	+	Shift + AV / Input / RDS				

<https://all-remote-controls.co.uk/en/Aeg/1065906-21352-replacement-remote-control-for-Aeg-RC25E.html>

Documents / Resources

	Mandis RC25E Remote Control [pdf] Instructions RC25E, RC25E Remote Control, Remote Control, Control
--	--

References

- [User Manual](#)