



Mandis RC3000E02 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC3000E02 Remote Control Instructions 

Mandis RC3000E02 Remote Control Instructions



Contents

1

REMOTE CONTROL

2

 
 
 
 
 
 
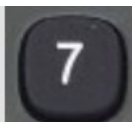 
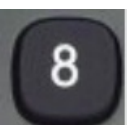 
 
 
Documents / Resources

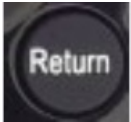 
 
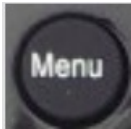 
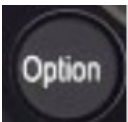 
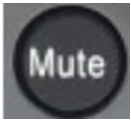 
2.1

 
 
 
 
References

3

Related Posts

Original		Replacement	
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide / EPG / -/

	Return		Back / Return
	Eco		D.Menu / Top
	Menu		Exit / Cancel / Clear
	Option		Setup / OPT /
	OK		OK
	Up		Up
	Down		Down
	PR+		CH+ / Page+
	Right/Zoom+		Right
	Left/Zoom		Left
	PR-		CH- / Page
	Info		Info / Angle
	Mute		Mute / Dimmer

	Vol+		Vol+
	Vol-		Vol-
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	List		Smart / List
	Red		Red / Netflix / Search
	TV		Display / Media
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	O)Lang		Audio / Lang I/II
	Blue		Blue / Prime Video / Random

Documents / Resources



[Mandis RC3000E02 Remote Control](#) [pdf] Instructions
RC3000E02, RC3000E02 Remote Control, Remote Control, Control

References

- [📄 Replacement remote control for RC 3000 E 02 \(04TCLTEL0223\)](#)
- [User Manual](#)