



Mandis RC3000E02 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC3000E02 Replacement Remote Control Instructions 



Contents

- [1 RC3000E02 Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

RC3000E02 Replacement Remote Control



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Option	 Setup / OPT /
 Source	 AV / Input / RDS	 OK	 OK
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 PR+	 CH+ / Page+
 4	 4	 Right/Zoom+	 Right
 5	 5	 Left/Zoom-	 Left
 6	 6	 PR-	 CH- / Page-
 7	 7	 Info	 Info / Angle
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Vol+	 Vol+
 0	 0	 Vol-	 Vol-
 Guide	 Guide / EPG / -/--	 Text	 Text / Goto
 Return	 Back / Return	 Subtitle	 Subtitle / EQ
 Eco	 D.Menu / Top	 List	 Smart / List
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 TV	 Display / Media
	 Green	 Green / APP / Repeat	
	 Yellow	 Yellow / YouTube / Repeat	
	 O)Lang	 Audio / Lang I/II	
	 Blue	 Blue / Prime Video / Random	



<https://tutti-i-telecomandi.it/it/1055812-20196-telecomando-di-sostituzione-per-RC-3000-E-02-04TCLTEL0223.html>



Documents / Resources



[Mandis RC3000E02 Replacement Remote Control](#) [pdf] Instructions

RC3000E02 Replacement Remote Control, RC3000E02, Replacement Remote Control, Remote Control, Control

References

-  [Telecomando sostituto di RC 3000 E 02 \(04TCLTEL0223\)](#)
- [User Manual](#)