



Mandis RC3010E01 Hannspree Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC3010E01 Hannspree Remote Control Instructions 

Contents

- [1 Mandis RC3010E01 Hannspree Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 OVERVIEW](#)
- [6 REMOTE FUNCTION](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Mandis

Mandis RC3010E01 Hannspree Remote Control



Product Information

The Hannspree RC3010E01 is a remote control designed for use with Hannspree TVs. It is available in both the original and substitute versions.

Specifications

- **Model:** Hannspree RC3010E01
- **Power Source:** 2x AAA Batteries (not included)
- **Compatibility:** Hannspree TVs
- **Colour Buttons:** Red, Green, Yellow, Blue
- **Website for Substitute Remote:** <https://tutti-i-telecomandi.it/it/Hannspree/1055373-24790-telecomando-di-sostituzione-per-Hannspree-RC3010E01.html>

Product Usage Instructions

- **Power On/Off**

To turn on the TV, press the “Power” button. To turn off the TV, press the “Power” button again.

- **Menu Navigation**

Use the arrow buttons (Up, Down, Right, Left) to navigate through the TV menu options. Press the “Menu” button to access the main menu and use the arrow buttons to select different menu options. Press the “Exit” button to exit the menu.

- **Volume Control**

Adjust the volume by pressing the “Vol+” button to increase the volume and the “Vol-” button to decrease the volume.

- **Channel Control**

To change the channel, use the “P+” and “P-” buttons. Press the “Ch+” button to go to the next channel and the

“Ch-” button to go to the previous channel.

- **Mute**

To mute the sound, press the “Mute” button. Press it again to unmute.

- **Color Buttons**

The colour buttons (Red, Green, Yellow, and Blue) may have different functions depending on the TV’s features and settings. Refer to the TV’s user manual for more information.

OVERVIEW





REMOTE FUNCTION

Originale		Sostituto		Originale		Sostituto	
	Power		Power		Down		Down
	Source		AV		OK		Ok
	1		1		Right		Right
	2		2		Left		Left
	3		3		Option		Options
	4		4		Return		Back
	5		5		Info		Info
	6		6		Mute		Mute
	7		7		P+		Ch +
	8		8		P-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Eco		3D		Text		Text
	Guide		Guide		Subtitle		Subt
	Menu		Menu		List		List
	Exit		Exit		TV		TV/R
	Up		Up		O)/Lang		Dual

Originale

Sostituto

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

FAQ

Q: Where can I purchase a substitute remote control for the Hannspree RC3010E01?

A: You can purchase a substitute remote control for the Hannspree RC3010E01 from the following website:

<https://tutti-i-telecomandi.it/it/Hannspree/1055373-24790-telecomando-di-sostituzione-per-Hannspree-RC3010E01.html>

<https://tutti-i-telecomandi.it/it/Hannspree/1055373-24790-telecomando-di-sostituzione-per-Hannspree-RC3010E01.html>

Documents / Resources



[Mandis RC3010E01 Hannspree Remote Control](#) [pdf] Instructions

RC3010E01 Hannspree Remote Control, RC3010E01, Hannspree Remote Control, Remote Control, Control

References

- [M Telecomando sostituto di HANNSPREE RC3010E01](#)
- [User Manual](#)