




Mandis RC39170 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC39170 Remote Control Instructions 

Contents

1

Mandis RC39170 Remote Control

2

Product Usage Instructions

3

Overview

4

Documents / Resources

4.1

References

5

Related Posts

Mandis



Product Information

Specifications

- **Product Name:** JVC RM-C3333
- **Power Source:** Originale – 1 2 3 4 5 6 7 8 9 0 Lang TXT Vol+ VolMute
- **Power Source:** Sostituto – Power AV 1 2 3 4 5 6 7 8 9 0 Dual Text Vol + Vol Mute
- **Control Buttons:** Originale – P+ PHome G i Back Exit Up Down Right Left OK > Rec Play
- **Control Buttons:** Sostituto – Ch + Ch Smart Guide Info Back Exit Up Down Right Left Ok > Rec Play
- **Product Link:** JVC RM-C3333 Replacement Remote Control

Product Usage Instructions

Power Source

To power the remote control

1. For the Original power source, press the corresponding buttons: 1, 2, 3, 4, 5, 6, 7, 8, 9, 0, Lang, TXT, Vol+, VolMute.
2. For the Replacement power source, press the corresponding buttons: Power, AV, 1, 2, 3, 4, 5, 6, 7, 8, 9, 0, Dual, Text, Vol+, Vol Mute.

Control Buttons

The control buttons on the remote control are used for various functions

- For the Original control buttons, use P+ (Program +), PHome (Program Home), G (Guide), i (Information), Back, Exit, Up, Down, Right, Left, OK, > (Next), Rec (Record), Play.

- For the Replacement control buttons, use Ch + (Channel +), Ch – (Channel -), Smart Guide, Info, Back, Exit, Up, Down, Right, Left, OK, > (Next), Rec (Record), Play.

Product Link

You can find more information and purchase the JVC RM-C3333 Replacement Remote Control here.

Frequently Asked Questions

- **Q: How do I change the power source?**

A: To change the power source, simply press the corresponding buttons on the remote control. For the Original power source, press the numbers and other function buttons mentioned in the user manual. For the Replacement power source, press the Power button followed by the numbers and other function buttons mentioned in the user manual.

- **Q: How do I use the control buttons?**

A: The control buttons on the remote control are used for various functions. For the Original control buttons, refer to the user manual for their specific functionalities. For the Replacement control buttons, refer to the user manual for their specific functionalities.

Overview



Originale	Sostituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Lang
	TXT
	Vol+
	Vol-
	Mute

Originale	Sostituto
	Ch +
	Ch -
	Smart
	Guide
	Info
	Back
	Exit
	Up
	Down
	Right
	Left
	Ok
	Pause
	Rec
	Play



