



Mandis RC3H Loewe Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC3H Loewe Remote Control Instructions 

Contents

- [1 Mandis RC3H Loewe Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PRODUCT OVERVIEW](#)
- [5 REMOTE USING INSTRUCTIONS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis RC3H Loewe Remote Control



Product Information

Specifications

- **Brand:** Loewe
- **Model:** RC3H
- **Compatibility:** Original remote control for Loewe devices
- **Dimensions:** Not specified
- **Weight:** Not specified

Product Usage Instructions

Power and Mute Buttons

The power button is used to turn the device on or off. The mute button is used to temporarily silence the audio.

Numeric Buttons

The numeric buttons (1-9, 0) are used for various functions such as entering channel numbers, navigating menus, or entering values.

EPG and PIP Buttons (Original Remote Control)

The EPG button opens the electronic program guide, allowing you to browse through available TV channels and their schedules. The PIP button activates the picture-in-picture mode, allowing you to watch multiple channels simultaneously.

Guide and Options Buttons (Replacement Remote Control)

The Guide button opens the TV guide, providing information about available channels and their schedules. The Options button opens a menu with additional settings and features.

Menu and Text Buttons

The Menu button opens the main menu of the device, where you can access various settings and features. The Text button displays teletext information if available.

Directional Buttons (Up, Down, Right, Left)

The directional buttons are used for navigation within menus, selecting options, or scrolling through lists.

Channel and Volume Buttons

The PR+ and PR- buttons (Original Remote Control) are used to switch between channels. The Ch + and Ch – buttons (Replacement Remote Control) serve the same purpose. The Vol+ and Vol- buttons are used to increase or decrease the volume level.

Color and Playback Buttons

The remote control includes color buttons (Red, Green, Yellow, Blue) that can be used for various functions depending on the device and context. The Play, Stop, and Pause buttons are used for controlling media playback.

FAQ

- **Q: Is this remote control compatible with all Loewe devices?**
- **A:** Yes, this remote control is designed to be compatible with Loewe devices.
- **Q: Can I use this remote control with other brands of TVs?**
- **A:** No, this remote control is specifically designed for Loewe devices and may not work with other brands.
- **Q: Are batteries included with the remote control?**
- **A:** No, batteries are not included. You will need to purchase batteries separately.

PRODUCT OVERVIEW

 
 


REMOTE USING INSTRUCTIONS



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	PIP		Options
	Menu		Menu
	Text		Text
	End		Exit
	Info		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/C.Set		Red
	Green/SV		Green
	Yellow/Zoom		Yellow
	Blue/Title		Blue
	Play		Play
	Stop		Stop
	Pause		Pause



	Rec		Rec
	>>		>>
	<<		<<
	Home		Smart
	Radio		TV/R
	Rec Menu	 + 	shift + Rec
	Marker		Pre Ch
	Time Shift		Format
	List		List

<https://all-remote-controls.co.uk/en/Loewe/1039097-60774-replacement-remote-control-for-Loewe-RC3H-89600A04.html>

Documents / Resources

	Mandis RC3H Loewe Remote Control [pdf] Instructions RC3H Loewe Remote Control, RC3H, Loewe Remote Control, Remote Control, Control
	Mandis RC3H Loewe Remote Control [pdf] Instructions RC3H Loewe Remote Control, RC3H, Loewe Remote Control, Remote Control, Control
	Mandis RC3H Loewe Remote Control [pdf] Instructions RC3H Loewe Remote Control, RC3H, Loewe Remote Control, Remote Control, Control
	Mandis RC3H Loewe Remote Control [pdf] Instructions RC3H Loewe Remote Control, RC3H, Loewe Remote Control, Remote Control, Control
	Mandis RC3H Loewe Remote Control [pdf] Instructions RC3H Loewe Remote Control, RC3H, Loewe Remote Control, Remote Control, Control
	Mandis RC3H Loewe Remote Control [pdf] Instructions RC3H Loewe Remote Control, RC3H, Loewe Remote Control, Remote Control, Control
	Mandis RC3H Loewe Remote Control [pdf] Instructions RC3H Loewe Remote Control, RC3H, Loewe Remote Control, Remote Control, Control
	Mandis RC3H Loewe Remote Control [pdf] Instructions RC3H Loewe Remote Control, RC3H, Loewe Remote Control, Remote Control, Control

References

-  [Replacement remote control for LOEWE RC3H \(89600A04\)](#)
- [User Manual](#)