



Mandis RC3H Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC3H Replacement Remote Control Instructions 

Contents

- [1 Mandis RC3H Replacement Remote Control](#)
- [2 Product Information](#)
- [3 FAQ](#)
- [4 FUNCTION](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mandis

Mandis RC3H Replacement Remote Control



Product Information

Specifications

- Product Name: Loewe RC3H
- Model Number: 89600A04
- Compatibility: Original remote control for Loewe devices
- Color: Black
- Dimensions: Not specified
- Weight: Not specified

Product Usage Instructions

Power and Mute Buttons

The power button is used to turn the device on or off. The mute button is used to mute or unmute the audio.

Numeric Keypad

The numeric keypad consists of numbers 1 to 9 and 0. These buttons are used for various functions such as entering channel numbers, setting up the device, or navigating menus.

EPG, PIP, and Menu Buttons

The EPG button is used to access the electronic program guide. The PIP button enables picture-in-picture mode. The menu button allows you to access the device's menu settings.

Text, End, and Guide Buttons

The text button is used for accessing teletext or closed captioning. The end button is used to exit menus or cancel operations. The guide button is used to access the program guide.

Navigation Buttons

The navigation buttons consist of up, down, right, and left arrows. These buttons are used to navigate through menus, options, and channels.

Channel and Volume Controls

The PR+ and PR- buttons are used to switch between channels. The PRVol+ and PRVol- buttons are used to adjust the volume. The Ch+ and Ch- buttons can also be used to change channels. The Vol+ and Vol- buttons are used to adjust the volume.

Color Buttons

The color buttons, including Red, Green, Yellow, and Blue, have various functions depending on the device and context. These buttons can be used for features like subtitle control, zooming, title control, or accessing specific functions.

Playback Controls


 
 
 
 

 

 

 

 

 
 
 

 
 
 
 
 
 

 
 

 



 
 
The play button is used to start playback of media. The stop button is used to stop playback. The pause button is used to pause playback temporarily.

 
 
 
 
 

 


FAQ

Q: Where can I find the specifications for the Loewe RC3H remote control?

A: You can find the specifications for the Loewe RC3H remote control on the official product page at all-remote-controls.co.uk.

FUNCTION

Original	Replacement	Original	Replacement
	Power		Info
	Mute		Ok
	1		Up
	2		Down
	3		Right
	4		Left
	5		Ch +
	6		Ch -
	7		Vol +
	8		Vol -
	9		Red
	0		Green
	Guide		Yellow
	Options		Blue
	Menu		Play
	Text		Stop
	Exit		Pause

Original	Replacement	Original	Replacement
	Rec		
	>>		
	<<		
	Smart		
	TV/R		
	Shift + Rec		
	Pre Ch		
	Format		
	List		

<https://all-remote-controls.co.uk/en/Loewe/1039097-60774-replacement-remote-control-for-Loewe-RC3H-89600A04.html>



[Mandis RC3H Replacement Remote Control](#) [pdf] Instructions

RC3H Replacement Remote Control, RC3H, Replacement Remote Control, Remote Control, Control

References

- [M Replacement remote control for LOEWE RC3H \(89600A04\)](#)
- [User Manual](#)