



# Mandis RC400 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC400 Remote Control Instructions 

## Contents

- [1 Mandis RC400 Remote Control](#)
- [2 Product Information](#)
  - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ \(Frequently Asked Questions\)](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)



# Mandis

**Mandis RC400 Remote Control**



## Product Information

### Specifications

- Model: Kathrein RC 400
- Compatibility: Replacement remote control for Kathrein RC400
- Color: Black

### Product Usage Instructions



Button	Function
Yellow	Perform a specific action associated with the color yellow
YouTube	Launch the YouTube application or access YouTube content
Repeat	Repeat the current media or content
Menu	Access the main menu or settings
Home Smart	Go to the smart home screen or hub
List	View a list or menu of available options
Power Display	Show the power status or information on the display
Media	Access media playback or content options
Info	Display additional information or details
Angle	Change the camera angle or view
Sleep	Activate sleep mode or timer settings
Timer	Set a timer for a specific duration
TV/Radio	Switch between TV and radio modes
ProUgpram	Access program settings or options
Dimmer	Adjust the brightness of the display or backlight
Audio	Adjust the audio settings or modes
Lang I/II	Select the desired language option (I or II)
AV	Switch to AV input or source
Input	Select the input source or mode
RDS	Access Radio Data System features or information

### Navigating Numeric Keypad

The remote control includes a numeric keypad for quick channel selection:

Button	Function
2-9	Select the corresponding channel number
0	Select the 10th channel or input

### FAQ (Frequently Asked Questions)

**Q: How do I replace the batteries in the remote control?**

**A:** To replace the batteries, follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover off and remove the old batteries.
3. Insert new batteries, ensuring correct polarity (+/-).

4. Slide the battery cover back into place.

**Q: Can I use this remote control with other Kathrein models?**

**A:** The Kathrein RC 400 replacement remote control is specifically designed for use with the Kathrein RC400 model. It may not be compatible with other Kathrein models.



**Q: How do I program the remote control for my TV?**

**A:** The remote control should already be pre-programmed for use with your TV. If it doesn't work, refer to the TV's user manual for instructions on how to program a universal remote control.

<https://all-remote-controls.co.uk/en/Kathrein/1060629-27883-replacement-remote-control-for-Kathrein-RC400.html>

Kathrein RC 400

Documents / Resources

	<p><a href="#">Mandis RC400 Remote Control</a> [pdf] Instructions RC400 Remote Control, RC400, Remote Control, Control</p>
	<p><a href="#">Mandis RC400 Remote Control</a> [pdf] Instructions RC400 Remote Control, RC400, Remote Control, Control</p>

References

- [User Manual](#)