

Mandis RC600 19900398 Remote Control



Mandis RC600 19900398 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC600 19900398 Remote Control Instructions 

Contents

- [1 Mandis RC600 19900398 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 PRODUCT OVERVIEW](#)
- [6 FUNCTION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Mandis

Mandis RC600 19900398 Remote Control



Product Information

Specifications

- Product Name: Power DVR
- Model: RC 600 19900398
- Compatibility: Kathrein RC-600
- Color: Black
- Dimensions: Not specified
- Weight: Not specified

Product Usage Instructions

Power On/Off

To power on the Power DVR, press the “Power” button located on the remote control. To power off, press and hold the “Power” button until the device shuts down.

Navigation

Use the directional buttons (Up, Down, Left, Right) to navigate through menus and options.

Selecting Options

To select an option or confirm a selection, press the “OK” button.

EPG Menu

The EPG (Electronic Program Guide) menu provides information about TV programs and schedules. Press the “EPG” button to access the EPG menu.

Volume Control

To adjust the volume, use the “Vol+” button to increase and the “Vol-” button to decrease the volume. To mute the sound, press the “Mute” button.

Channel Control

Use the number buttons (1-9) to directly enter a channel number. Press the “0” button for channel 10. To switch between channels, use the “Up” and “Down” buttons.

Recording

To start recording, press the “Rec” button. The color of the button may vary depending on the remote control version. To stop recording, press the “Stop” button.

Sleep Timer

To set a sleep timer, press the “Sleep” button and select the desired time duration from the options provided.

Frequently Asked Questions

Q: Where can I find a replacement remote control for the Kathrein RC-600?

A: You can find a replacement remote control for the Kathrein RC-600 on the following website: [Replacement Remote Control for Kathrein RC-600](#).

PRODUCT OVERVIEW



FUNCTION

Original		Replacement	
	Power		Power
	DVR		Smart
	R	 + 	Shift + TV/R
	TV		TV/R
	OO		Dual
	F		Back
	TV		AV
	A/B		Options
	EPG		Guide
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Prog		Sleep
	Exit		Exit

Original		Replacement	
	Stop		Stop
	Red / Rec		Red
	Red / Rec		Rec
	Green / <<		Green
	Green / <<		<<
	Green / <<		l<<
	Yellow / Play		Yellow
	Yellow / Play		Play
	Blue / >>		Blue
	Blue / >>		>>
	Blue / >>		>>l
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Original		Replacement	
	7		7
	8		8
	9		9
	0		0
	i		Info
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -

<https://all-remote-controls.co.uk/en/Kathrein/1063386-55511-replacement-remote-control-for-Kathrein-RC-600-19900398.html>

Documents / Resources

	Mandis RC600 19900398 Remote Control [pdf] Instructions RC600 19900398 Remote Control, RC600 19900398, Remote Control, Control
---	---

References

- [M Replacement remote control for KATHREIN RC 600 19900398](#)
- [User Manual](#)