



Mandis RC675 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC675 Replacement Remote Control Instructions 

Mandis RC675 Replacement Remote Control Instructions



Contents

 
- [1 Product Overview](#)
- [2 Button Instruction](#)
- [3 Product Overview](#)
- [4 Button Instruction](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Product Overview



Button Instruction

Original	Replacement
----------	-------------

 TV/R	 TV/Radio /
 On/Off	 Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
 Menu	 Menu / Home
 0	 0
 Text	 Text / Goto
 Vol-	 Vol-
 P+	 CH+ / Page+
 Vol+	 Vol+

 
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold

Product Overview



Button Instruction

Original	Replacement
----------	-------------

 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 i	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/-
 Up	 Up
 Media	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Portal	 Smart / List
 <<	 << / Tune-



Documents / Resources



[Mandis RC675 Replacement Remote Control](#) [pdf] Instructions

RC675 Replacement Remote Control, RC675, Replacement Remote Control, Remote Control, Control

References

- [M Replacement remote control for KATHREIN RC675](#)
- [User Manual](#)