



## Mandis RC728 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC728 Remote Control Instructions 

### Contents

- [1 Mandis RC728 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 BUTTON FUNCTION](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)



**Mandis RC728 Remote Control**



## Product Information

### Specifications:

- Supported Audio Formats: DVD, 5.1 Stereo, AUX1, AUX2, 2.1CH, 5.1CH
- Supported Video Formats: 3D
- Supported Media: Smart Media
- Color Options: Blue, Yellow, Red, Green

## Product Usage Instructions

### Power and Standby

To turn on the device, press the Power button. To put the device on standby mode, press the Standby button.

### Volume Control

To increase the volume, press the Master Vol+ button. To decrease the volume, press the Master Vol- button.

### Audio Settings

To adjust the front speakers' volume, use the FrontVol+ and FrontVol- buttons. To adjust the treble, use the TreBass+ and TreBass- buttons. To adjust the bass, use the BassCen+ and BassCen- buttons.

## Surround Sound Settings

To adjust the center speaker volume, use the CenSur+ and CenSur- buttons. To adjust the surround speakers' volume, use the SurSW+ and SurSW- buttons. To enable or disable surround sound, use the SWMute button.

## Media and Navigation Control

To navigate through media tracks or menus, use the Up, Down, Right, and Left buttons. To play or pause media, press the >|I button. To skip to the next track or menu item, press the >> button. To go back to the previous track or menu item, press the < button.

## OVERVIEW





## BUTTON FUNCTION

| Original                                                                            |             | Replacement                                                                         |        |
|-------------------------------------------------------------------------------------|-------------|-------------------------------------------------------------------------------------|--------|
|    | Standby     |    | Power  |
|    | Reset       |    | Exit   |
|    | DVD 5.1     |    | Blue   |
|    | Stereo      |    | Yellow |
|    | AUX1        |    | Red    |
|    | AUX2        |    | Green  |
|    | 2.1CH       |    | Smart  |
|    | 5.1CH       |    | Media  |
|    | Master Vol+ |    | Vol +  |
|    | Master Vol- |    | Vol -  |
|    | Front+      |    | Right  |
|    | Front-      |    | Left   |
|    | Tre+        |    | Ch +   |
|  | Tre-        |  | Ch -   |
|  | Bass+       |  | 2      |
|  | Bass-       |  | 1      |
|  | Cen+        |  | Up     |

|                                                                                   |      |                                                                                   |      |
|-----------------------------------------------------------------------------------|------|-----------------------------------------------------------------------------------|------|
|   | Cen- |   | Down |
|  | Sur+ |  | >>   |
|  | Sur- |  | <<   |
|  | SW+  |  | >>I  |
|  | SW-  |  | I<<  |
|  | Mute |  | Mute |
|  | 3D   |  | 3D   |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |
|                                                                                   |      |                                                                                   |      |

## FAQ

- Q: How do I change the color of the device?

A: The device comes with interchangeable covers. To change the color, simply replace the current cover with the desired color.

- Q: What media formats are supported?

A: The device supports DVD, 5.1 Stereo, AUX1, AUX2, and Smart Media formats for audio. It also supports 3D video format.

<https://all-remote-controls.co.uk/en/Emerson/1055627-20141-replacement-remote-control-for-Emerson-RC-728.html>



**[Mandis RC728 Remote Control](#)** [pdf] Instructions  
RC728 Remote Control, RC728, Remote Control, Control

## References

- **[M Replacement remote control for EMERSON RC-728](#)**
- **[User Manual](#)**