



Mandis RC799M Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC799M Remote Control Instructions 



Instructions

Contents

[1 RC799M Remote Control](#)

[2 Documents / Resources](#)

[2.1 References](#)

RC799M Remote Control

[RC799M-RECEIVER-TV](#) ()



Original	Replacement
Power Receiver	Power
Enter Receiver	Ok
Up Receiver	Up
Down Receiver	Down
Right Receiver	Right
Left Receiver	Left
Return Receiver	Back
Q/Setup Receiver	Smart
Home/Audio	Media
Play Receiver	Play
I<< Receiver	I<<
>>I Receiver	>>I
<< Receiver	<<
>> Receiver	>>
Pause Receiver	Pause
Stop Receiver	Stop
1 Receiver	1

Original	Replacement
2 Receiver	2
3 Receiver	3
4 Receiver	4
5 Receiver	5
6 Receiver	6
7 Receiver	7
8 Receiver	8
9 Receiver	9
0/11 Receiver	0
+10/--10/Dimmer/D.Tun Receiver	Shift + Guide
CLR/Sleep/12 Receiver	Pre Ch
Movie Tv/Red/Search	Red
Music/Green/Repeat at Receiver	Green
Game/Yellow/Random Receiver	Yellow
Stereo/Blue/Mode Receiver	Blue
Vol+ Receiver	Vol +
Vol- Receiver	Vol -



Original	Replacement
CH Disc/Album+ Receiver	Ch +
CH Disc/Album- Receiver	Ch -
Power Tv	Shift + Power
Input Tv	AV
CH+ Tv	Shift + Ch +
CH- Tv	Shift + Ch -
Up Tv	Shift + Up
Enter Tv	Shift + Ok
Down Tv	Shift + Down
Right Tv	Shift + Right
Left Tv	Shift + Left
Menu/Prev CH	Menu
Top Menu/Guide	Shift + Menu
Return Tv	Shift + Back
Q/Setup Tv	Shift + Smart
Red Tv	Options
Green Tv	Dual


Original	Replacement
Yellow Tv	Subt
Blue Tv	TV/R
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3
4 Tv	Shift + 4
5 Tv	Shift + 5
6 Tv	Shift + 6
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0/11 Tv	Shift + 0
+10/--10 Tv	Guide
CLR/Sleep/12	Shift + Pre Ch
Vol+ Tv	Shift + Dual
Vol- Tv	Shift + Options
AUX	Text





Original		Replacement		Original		Replacement	
	Power BD/DVD		Power		Stop BD/DVD		Stop
	Menu/Prev CH		Menu		Movie Tv/Red/Search		Red
	Top Menu/Guide BD/DVD		Options		Music/Green/Repe at BD/DVD		Green
	Q/Setup		Smart		Game/Yellow/Ran dom BD/DVD		Yellow
	Return BD/DVD		Back		Stereo/Blue/Mode BD/DVD		Blue
	Home/Audio		Media		1 BD/DVD		1
	Enter BD/DVD		Ok		2 BD/DVD		2
	Up BD/DVD		Up		3 BD/DVD		3
	Down BD/DVD		Down		4 BD/DVD		4
	Right BD/DVD		Right		5 BD/DVD		5
	Left BD/DVD		Left		6 BD/DVD		6
	I<< BD/DVD		I<<		7 BD/DVD		7
	>>I BD/DVD		>>I		8 BD/DVD		8
	<< BD/DVD		<<		9 BD/DVD		9
	>> BD/DVD		>>		0/11 BD/DVD		0
	Play BD/DVD		Play		+10/-/-10/D.Tun/ Dimmer BD/DVD		Guide
	Pause BD/DVD		Pause		CLR/Sleep/12		Pre Ch

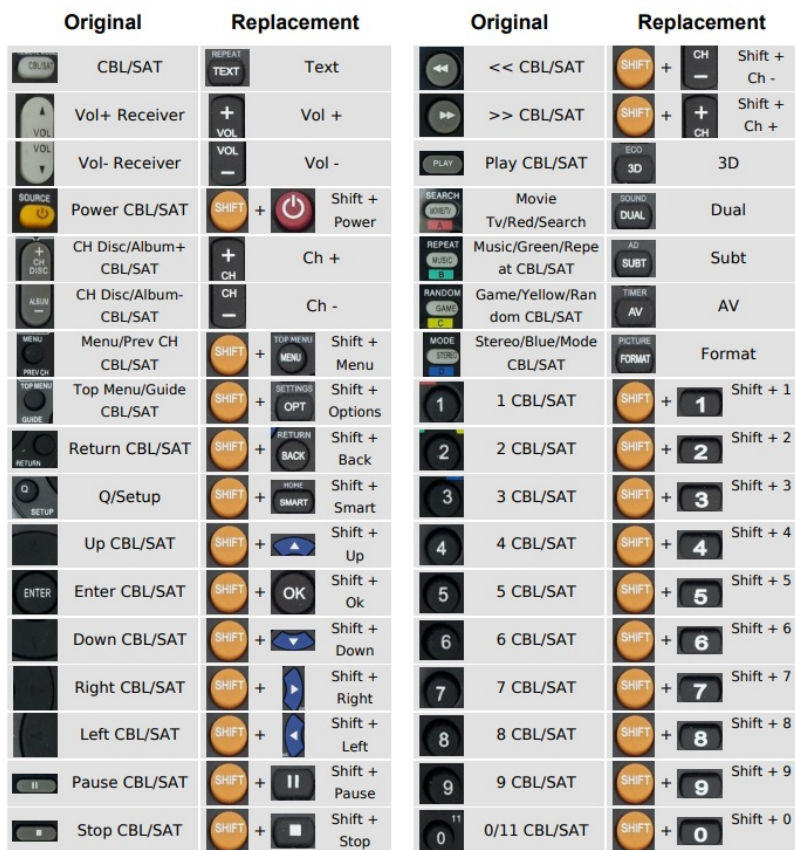

[illegible]




Original		Replacement		Original		Replacement	
	Power TV/CD		Power		Stop TV/CD		Stop
	CH/Disc+ TV/CD		Ch +		Movie TV/Red/Search		Red
	CH/Disc TV/CD		Ch -		Music/Green/Repeat TV/CD		Green
	Return TV/CD		Back		Game/Yellow/Random TV/CD		Yellow
	Q/Setup TV/CD		Smart		Stereo/Blue/Mode TV/CD		Blue
	Home/Audio		Media		1 TV/CD		1
	Up TV/CD		Up		2 TV/CD		2
	Down TV/CD		Down		3 TV/CD		3
	Right TV/CD		Right		4 TV/CD		4
	Left TV/CD		Left		5 TV/CD		5
	Enter TV/CD		Ok		6 TV/CD		6
	I<< TV/CD		I<<		7 TV/CD		7
	>>I TV/CD		>>I		8 TV/CD		8
	<< TV/CD		<<		9 TV/CD		9
	>> TV/CD		>>		0/11 TV/CD		0
	Play TV/CD		Play		+10/-/-10/D.Tun/Dimmer TV/CD		Guide
	Pause TV/CD		Pause		CLR/Sleep/12		Pre Ch

[illegible]

<https://all-remote-controls.co.uk/en/Onkyo/1057550-81938-replacement-remote-control-for-Onkyo-RC799M-188557423.html>

RC799M-ZONE2 (AUX)

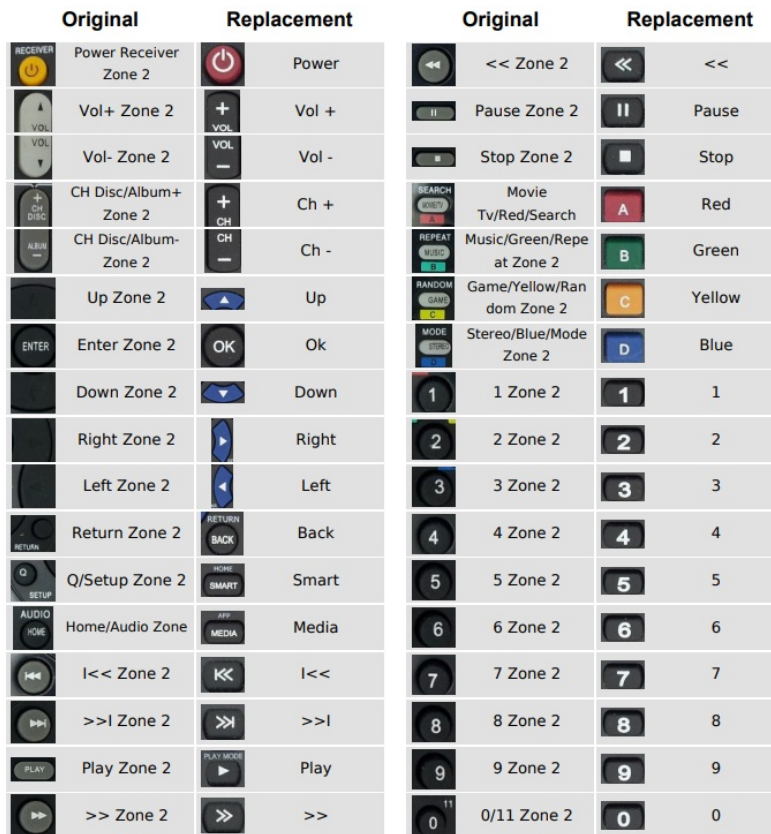[illegible]

<https://all-remote-controls.co.uk/en/Onkyo/1057550-81938-replacement-remote-control-for-Onkyo-RC799M-188557423.html>

Documents / Resources



[Mandis RC799M Remote Control](#) [pdf] Instructions
RC799M Remote Control, RC799M, Remote Control, Control

References

- [M Replacement remote control for ONKYO RC799M \(188557423\)](#)
- [User Manual](#)