



Mandis RC799M Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC799M Replacement Remote Control Instructions 



RC799M-RECEIVER-TV ()

Contents

- [1 RC799M Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

RC799M Replacement Remote Control



Original	Replacement	Original	Replacement
Power Receiver	Power	2 Receiver	2
Enter Receiver	Ok	3 Receiver	3
Up Receiver	Up	4 Receiver	4
Down Receiver	Down	5 Receiver	5
Right Receiver	Right	6 Receiver	6
Left Receiver	Left	7 Receiver	7
Return Receiver	Back	8 Receiver	8
Q/Setup Receiver	Smart	9 Receiver	9
Home/Audio	Media	0/11 Receiver	0
Play Receiver	Play	+10/-10/Dimmer/D.Tun Receiver	Shift + Guide
I<< Receiver	I<<	CLR/Sleep/12 Receiver	Pre Ch
>>I Receiver	>>I	Movie Tv/Red/Search	Red
<< Receiver	<<	Music/Green/Repeat Receiver	Green
>> Receiver	>>	Game/Yellow/Random Receiver	Yellow
Pause Receiver	Pause	Stereo/Blue/Mode Receiver	Blue
Stop Receiver	Stop	Vol+ Receiver	Vol +
1 Receiver	1	Vol- Receiver	Vol -

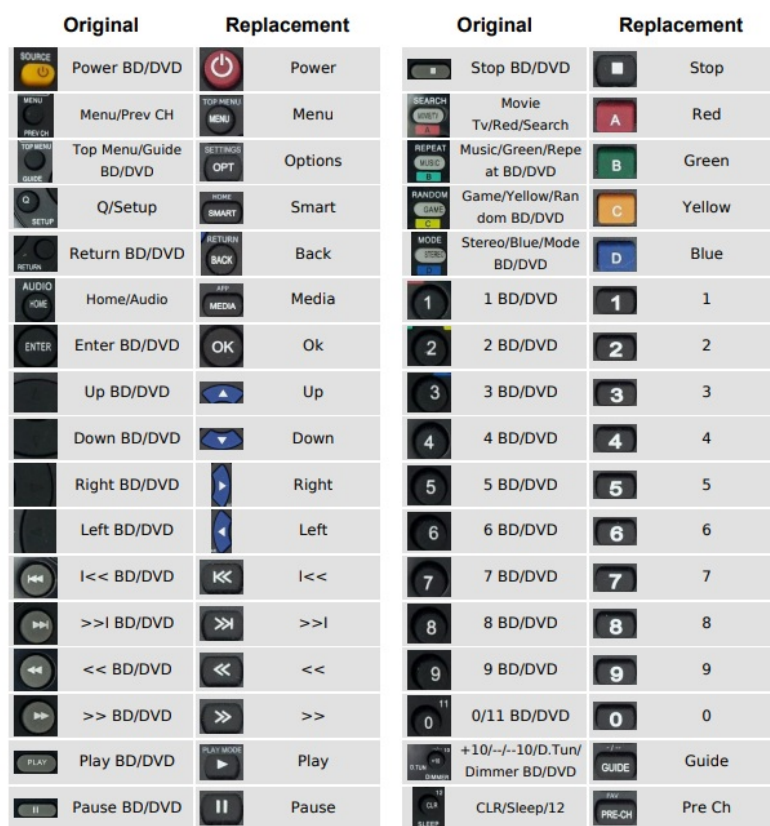 


Original	Replacement	Original	Replacement
CH Disc/Album+ Receiver	Ch +	Yellow Tv	Subt
CH Disc/Album- Receiver	Ch -	Blue Tv	TV/R
Power Tv	Shift + Power	1 Tv	Shift + 1
Input Tv	AV	2 Tv	Shift + 2
CH+ Tv	Shift + Ch +	3 Tv	Shift + 3
CH- Tv	Shift + Ch -	4 Tv	Shift + 4
Up Tv	Shift + Up	5 Tv	Shift + 5
Enter Tv	Shift + Ok	6 Tv	Shift + 6
Down Tv	Shift + Down	7 Tv	Shift + 7
Right Tv	Shift + Right	8 Tv	Shift + 8
Left Tv	Shift + Left	9 Tv	Shift + 9
Menu/Prev CH	Menu	0/11 Tv	Shift + 0
Top Menu/Guide	Shift + Menu	+10/-10 Tv	Guide
Return Tv	Shift + Back	CLR/Sleep/12	Shift + Pre Ch
Q/Setup Tv	Shift + Smart	Vol+ Tv	Shift + Dual
Red Tv	Options	Vol- Tv	Shift + Options
Green Tv	Dual	AUX	Text

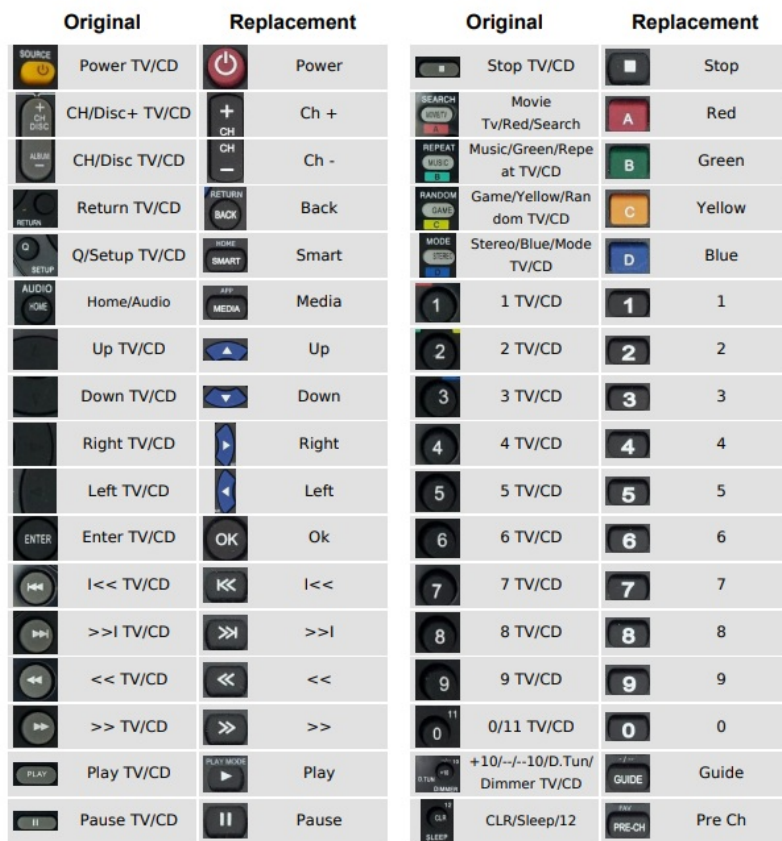 


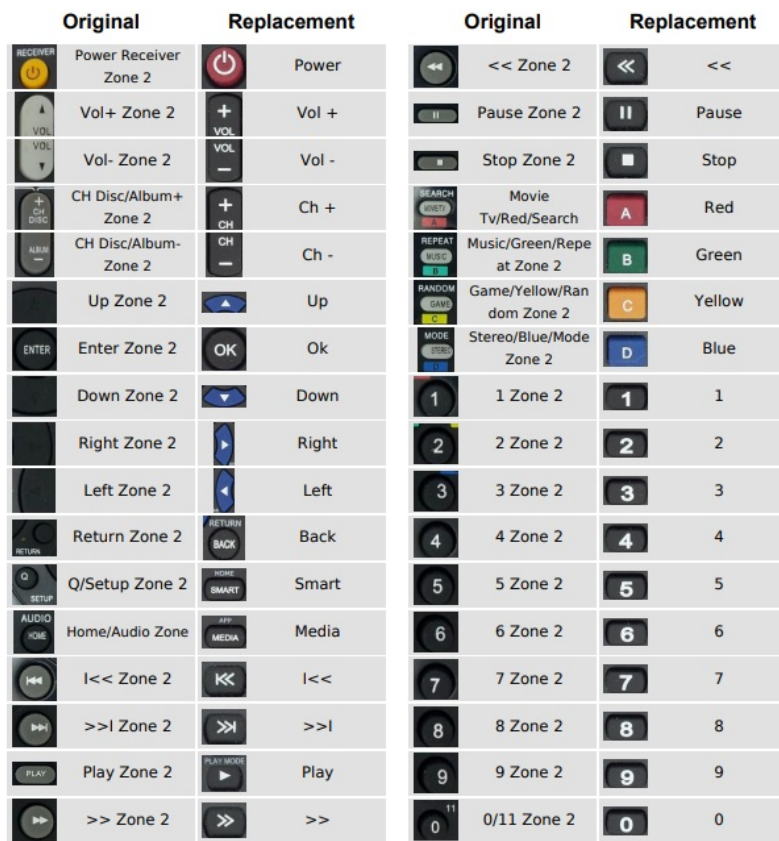 


RC799M-BD-DVD-CBL-SAT (TV)



[illegible]RC799M-TV-CD ()

[illegible]

[illegible]

Documents / Resources



[Mandis RC799M Replacement Remote Control](#) [pdf] Instructions

RC799M Replacement Remote Control, RC799M, Replacement Remote Control, Remote Control, Control

References

- [M Replacement remote control for ONKYO RC799M \(188557423\)](#)
- [User Manual](#)