



Mandis RC8002 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC8002 Replacement Remote Control Instructions 

Mandis RC8002 Replacement Remote Control



Contents

- [1 Product Overview](#)
- [2 Buttons Descriptions](#)
- [3 Customers Support](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

 
 
Product Overview

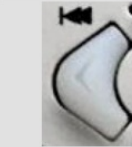 
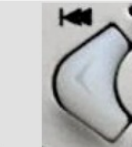 
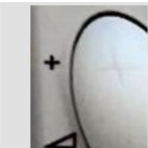 
 




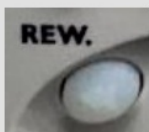 
Buttons Descriptions

Original	Recharge
----------	----------

	Power		Power
	Green / Prog.		Green / APP / Repeat
	Green / Prog.		TV/Radio /
	Yellow / Status		Yellow / YouTube / Repeat
	Yellow / Status		Info / Angle
	Blue / Guide		Blue / Prime Video / Random
	Blue / Guide		Guide / EPG / -/--
	Red / Dec.		Red / Netflix / Search
	Up		Up
	Purple / Text		Display / Media

 TEXT	Purple / Text	 GOTO TEXT	Text / Goto
 EXIT	Exit	 CLEAR EXIT CANCEL	Exit / Cancel / Clear
	Left / L<<		Left
	Left / L<<	 PRESET- ⏮	L<< / Preset-
 OK	OK	 OK	OK
	Right / >>R		Right
	Right / >>R	 PRESET+ ⏭	>>R / Preset+
 MENU	Menu	 HOME MENU	Menu / Home
 + VOL	Vol+	 + VOL	Vol+
	Down		Down
 + PR	PR+	 + CH PAGE	CH+ / Page+
 - VOL	Vol-	 - VOL	Vol-

	Mute		Mute / Dimmer
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	Index / Mark		Fav / Marker / PC
	4		4
	5		5
	6		6
	0000	 	Shift + Exit / Cancel / Clear
	7		7
	8		8

	9		9
	SP / LP		Smart / List
	AV		AV / Input / RDS
	0 / --		0
	<< REW.		<< / Tune-
	Play		Play / Slow
	>> F.FWD		>> / Tune+
	Rec.		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Customers Support

[RC8002N-TV \(TV\)](#)

<https://all-remote-controls.co.uk/en/Thomson/1061003-10814-replacement-remote-control-for-Thomson-RC8002N-21215130.html>



Documents / Resources



[Mandis RC8002 Replacement Remote Control](#) [pdf] Instructions

RC8002 Replacement Remote Control, RC8002, Replacement Remote Control, Remote Control

References

- [M Replacement remote control for THOMSON RC8002N \(21215130\)](#)
- [User Manual](#)