



Mandis RC8002N 21215130 Remote Control Replacement Instructions

[Home](#) » [Mandis](#) » Mandis RC8002N 21215130 Remote Control Replacement Instructions 

Mandis RC8002N 21215130 Remote Control Replacement Instructions



Contents

1 Remote Control

2 Documents / Resources

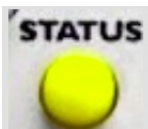 
2.1 References

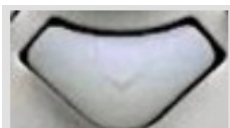 
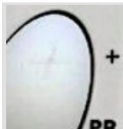 
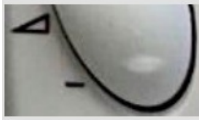 
3 Related Posts

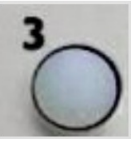 
Remote Control



Original	Replacement
 Power	 Power
 Green / Prog.	 Green / APP / Repeat

 Green / Prog.	 TV/Radio /
 Yellow / Status	 Yellow / YouTube / Repeat
 Yellow / Status	 Info / Angle
 Blue / Guide	 Blue / Prime Video / Random
 Blue / Guide	 Guide / EPG / -/-
 Red / Dec.	 Red / Netflix / Search
 Up	 Up
 Purple / Text	 Display / Media
 Purple / Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Left / I<<	 Left

 Left / I<<	 I<< / Preset
 OK	 OK
 Right / >>I	 Right
 Right / >>I	 >>I / Preset+
 Menu	 Menu / Home
 Vol+	 Vol+
 Down	 Down
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer

 PR-	 CH- / Page
 1	 1
 2	 2
 3	 3
 Index / Mark	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 0000	 Shift + Exit / Cancel / Clear
 7	 7
 8	 8

 9	 9
 SP / LP	 Smart / List
 AV	 AV / Input / RDS
 0 / —	 0
 << REW.	 << / Tune
 Play	 Play / Slow
 >> F.FWD	 >> / Tune+
 Rec.	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze



<https://all-remote-controls.co.uk/en/Thomson/1061003-10814-replacement-remote-control-for-ThomsonRC8002N-21215130.html>



Documents / Resources



[Mandis RC8002N 21215130 Remote Control Replacement](#) [pdf] Instructions
RC8002N 21215130 Remote Control Replacement, RC8002N 21215130, Remote Control Replacement, Control Replacement

References

- [M Replacement remote control for THOMSON RC8002N \(21215130\)](#)
- [User Manual](#)