



Mandis RC8002N TV Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC8002N TV Replacement Remote Control Instructions 

Contents

- [1 Mandis RC8002N TV Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Product Overview](#)
- [6 Remote Using Instructions](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis RC8002N TV Replacement Remote Control



Product Information

Specifications

- **Product Name:** RC8002N Remote Control
- **Compatibility:** Thomson devices
- **Model:** RC8002N-TV (for TV), RC8002N-VCR (for VCR)

Can I replace a lost TV remote?

- Look up your TV model and then check in the usual places.
- You can contact the manufacturer directly, but you may be able to find a cheap replacement on Ebay, Amazon or any number of other internet stores.

Product Usage Instructions

TV Remote Control

Original Remote Control Buttons

- Power
- Green / Prog. Green / Prog. Yellow / Status Yellow / Status Blue / Guide Blue / Guide
- Red / Dec. Up
- Purple / Text Purple / Text
- Exit Left / II Right / >>I
- Menu Vol+ Down PR+ VolMute PR-
- 1 2 3 Index / Mark 4 5 6 0000 7 8
- 9 SP / LP AV 0 / -> F.FWD Rec. Stop Pause

Replacement Remote Control Buttons

- Power
- Green / APP / Repeat
- TV/Radio / YelloPwro/ gYroaumTube
- Info / Angle Blue / Prime Video / Random
- Guide / EPG / -/-Red / Netflix / Search Up
- Display / Media Text / Goto
- Exit / Cancel / Clear
- Left I>I / Preset+
- Menu / Home Vol+ Down CH+ / Page+ Vol- Mute / Dimmer CH- / Page-
- 1 2 3 Fav / Marker / PC 4 5 6 Shift + Exit
- + / Cancel / Clear 7 8
- 9 Smart / List AV / Input / RDS
- 0 > / Tune+ Rec / Rec Mode Stop / Hold
- Pause / Step / Freeze

VCR Remote Control

Original Remote Control Buttons

- Power Green / Prog. Green / Prog. Yellow / Status Yellow / Status Blue / Guide Blue / Guide
- Red / Dec. Up
- Purple / Text Purple / Text
- Exit Left / II Right / >>I
- Menu Vol+ Down PR+ VolMute PR-
- 1 2 3 Index / Mark 4 5 6 0000 7 8
- 9 SP / LP AV 0 / -> F.FWD Rec Stop Pause

Replacement Remote Control Buttons

- Power Green / APP / Repeat
- TV/Radio / InfPoro/gAranmgle Yellow / YouTube
- Repeat Blue / Prime Video / Random Guide / EPG / -/- Red / Netflix / Search
- Up Display / Media Text / Goto

- Exit / Cancel / Clear
- I>I / Preset+
- Menu / Home Vol+ Down CH+ / Page+ Vol- Mute / Dimmer CH- / Page-
- 1 2 3 Fav / Marker / PC 4 5 6 Shift + Exit
- + / Cancel / Clear 7 8
- 9 Smart / List AV / Input / RDS
- 0 > / Tune+ Rec / Rec Mode Stop / Hold
- Pause / Step / Freeze

FAQ

- **Is the RC8002N remote control compatible with all Thomson devices?**
 - No, the RC8002N remote control is only compatible with specific Thomson devices. Please check the product compatibility section for details.
- **Where can I find the user manual for the RC8002N remote control?**
 - You can find the user manual for the RC8002N remote control on the official Thomson website or refer to the product manual that came with your device.
- **How do I replace the batteries in the RC8002N remote control?**
 - To replace the batteries in the RC8002N remote control, open the battery compartment located on the back of the remote and insert new batteries following the polarity markings.
- **What should I do if some buttons on my RC8002N remote control are not working?**
 - If some buttons on your RC8002N remote control are not working, try replacing the batteries first. If the issue persists, check if the remote control is properly paired with your device. Refer to the user manual for instructions on pairing the remote control.

Product Overview



Remote Using Instructions

Original / Replacement

RC8002N-TV (TV)

	Power		Power
	Green / Prog.		Green / APP / Repeat
	Green / Prog.		TV/Radio /
	Yellow / Status		Yellow / YouTube / Repeat
	Yellow / Status		Info / Angle
	Blue / Guide		Blue / Prime Video / Random
	Blue / Guide		Guide / EPG / -/--
	Red / Dec.		Red / Netflix / Search
	Up		Up
	Purple / Text		Display / Media
	Purple / Text		Text / Goto
	Exit		Exit / Cancel / Clear
	Left / I<<		Left
	Left / I<<		I<< / Preset-
	OK		OK
	Right / >>I		Right
	Right / >>I		>>I / Preset+

	Menu		Menu / Home
	Vol+		Vol+
	Down		Down
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	Index / Mark		Fav / Marker / PC
	4		4
	5		5
	6		6
	0000	 + 	Shift + Exit / Cancel / Clear
	7		7
	8		8

	9		9
	SP / LP		Smart / List
	AV		AV / Input / RDS
	0 / --		0
	<< REW.		<< / Tune-
	Play		Play / Slow
	>> F.FWD		>> / Tune+
	Rec.		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

RC8002N-VCR (DVD)

	Power		Power
	Green / Prog.		Green / APP / Repeat
	Green / Prog.		TV/Radio /
	Yellow / Status		Info / Angle
	Yellow / Status		Yellow / YouTube / Repeat
	Blue / Guide		Blue / Prime Video / Random
	Blue / Guide		Guide / EPG / -/--
	Red / Dec.		Red / Netflix / Search
	Up		Up
	Purple / Text		Display / Media
	Purple / Text		Text / Goto
	Exit		Exit / Cancel / Clear
	Left / I<<		I<< / Preset-
	Left / I<<		Left
	OK		OK
	Right / >>I		Right
	Right / >>I		>>I / Preset+

	Menu		Menu / Home
	Vol+		Vol+
	Down		Down
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	Index / Mark		Fav / Marker / PC
	4		4
	5		5
	6		6
	0000	 + 	Shift + Exit / Cancel / Clear
	7		7
	8		8

	9		9
	SP / LP		Smart / List
	AV		AV / Input / RDS
	0 / --		0
	<< REW.		<< / Tune-
	Play		Play / Slow
	>> F.FWD		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

<https://all-remote-controls.co.uk/en/Thomson/1061003-10814-replacement-remote-control-for-Thomson-RC8002N-21215130.html>

Documents / Resources

	Mandis RC8002N TV Replacement Remote Control [pdf] Instructions RC8002N TV Replacement Remote Control, RC8002N TV, Replacement Remote Control, Remote Control
	Mandis RC8002N-TV Replacement Remote Control [pdf] Instructions RC8002N-TV Replacement Remote Control, RC8002N-TV, Replacement Remote Control, Remote Control, Control
	Mandis RC8002N TV Replacement Remote Control [pdf] Instructions RC8002N TV Replacement Remote Control, RC8002N, TV Replacement Remote Control, Replacement Remote Control, Remote Control, Control
	Mandis RC8002N TV Replacement Remote Control [pdf] Instructions RC8002N TV Replacement Remote Control, RC8002N, TV Replacement Remote Control, Replacement Remote Control, Remote Control, Control
	Mandis RC8002N TV Replacement Remote Control [pdf] Instructions RC8002N TV Replacement Remote Control, RC8002N, TV Replacement Remote Control, Replacement Remote Control, Remote Control
	Mandis RC8002N-TV Replacement Remote Control [pdf] Instructions RC8002N-TV Replacement Remote Control, RC8002N-TV, Replacement Remote Control, Remote Control
	Mandis RC8002N TV Replacement Remote Control [pdf] Instructions RC8002N TV Replacement Remote Control, RC8002N, TV Replacement Remote Control, Replacement Remote Control, Remote Control

References

- [M Replacement remote control for THOMSON RC8002N \(21215130\)](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.