



Mandis RC963 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RC963 Remote Control Instructions 

Mandis RC963 Remote Control Instructions

 


[Denon RC963](#)



Original	Replacement	Original	Replacement
 DVD Power	 Power	 Subtitle	 Subt
 Open/Close	 Eject	 Audio	 Dual
 1	 1	 Repeat	 Text
 2	 2	 A-B Repeat	 AV
 3	 3	 Menu	 Menu
 4	 4	 Top Menu/PBC	 Shift + Menu
 5	 5	 Angle	 Red
 6	 6	 Return	 Back
 7	 7	 Up	 Up
 8	 8	 Enter	 Ok
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 +10	 Guide	 Left	 Left
 Prog/Direct	 Sleep	 Display	 Info
 Call	 Pre Ch	 Stop	 Stop
 Clear	 Exit	 Still/Pause	 Pause
 Random	 Media	 Play	 Play





Pag. 2 / 2

1 Documents / Resources

1.1 References

Documents / Resources

	Mandis RC963 Remote Control [pdf] Instructions RC963 Remote Control, RC963, Remote Control, Control
	Mandis RC963 Remote Control [pdf] Instructions RC963 Remote Control, RC963, Remote Control, Control
	Mandis RC963 Remote Control [pdf] Instructions RC963 Remote Control, RC963, Remote Control, Control

References

- [M Replacement remote control for DENON RC963 \(00D9430020101\)](#)
- [User Manual](#)