



Mandis RD-443E Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RD-443E Remote Control Instructions 

Contents

- [1 Mandis RD-443E Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ:](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mandis

Mandis RD-443E Remote Control Instructions



Product Information

Specifications

- Model: Nec RD-448E
- Power On/Off: Yes
- Auto ADJ: Yes
- Media: Yes
- AV-Mute: Yes
- Freeze: Yes
- AV Pause: Yes
- Computer Inputs: 3 (Computer 1, Computer 2, Computer 3)
- Video Inputs: 2 (Video, S-Video)
- Digital Zoom: Yes
- Viewer: Yes
- Eco Mode: Yes
- Keystone Picture: Yes
- Smart Function: Yes
- Help Focus/Zoom: Yes
- Aspect Ratio Control: Yes
- Volume Control: Yes
- Format Control: Yes

- Eject: Yes

Original		Rechange	
	Power On		Power
	Power Off	 + 	Shift + Power
	Auto ADJ		Media
	1 / Computer 1		1
	2 / Computer 2		2
	3 / Computer 3		3
	4/Video		4
	5/S-Video		5
	7		7
	6/Viewer		6
	8		8
	9		9
	0		0
	Clear	 + 	Shift + Up
	ID Set +		List
	Menu		Menu
	AV-Mute		Mute

Original		Rechange	
	AV-Mute		AV
	Freeze		Pause
	Exit		Exit
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	D.Zoom+		Ch +
	D.Zoom-		Ch -
	Page-		Shift + Ch -
	Page+		Shift + Ch +
	L-Click Mouse		Guide
	R-Click Mouse		Pre Ch
	Eco Mode		3D
	Keystone		Smart
	Picture		Shift + Format

Original		Rechange	
	Help		D. Menu
	Focus/Zoom		Eject
	Aspect		Format
	Vol+		Vol +
	Vol-		Vol -

Product Usage Instructions

Power On/Off

To turn on the device, press the Power button. To turn off the device, press and hold the Power button until the device powers off.

Auto ADJ:

To automatically adjust the settings, press the Auto ADJ button.

Media:

To access media functions, press the Media button.

AV-Mute:

To mute the audio and video, press the AV-Mute button.

Freeze:

To freeze the current image, press the Freeze button.

AV Pause:

To pause the audio and video playback, press the AV Pause button.

Computer Inputs:

There are 3 computer inputs available: Computer 1, Computer 2, and Computer 3. Use the corresponding buttons (1, 2, or 3) to select the desired input.

Video Inputs:

There are 2 video inputs available: Video and S-Video. Use the corresponding buttons (4 or 5) to select the desired input.

Digital Zoom:

To zoom in on the image, press the D.Zoom+ button. To zoom out, press the D.Zoom- button.

Viewer:

To access the viewer function, press the Viewer button.

Eco Mode:

To enable or disable Eco Mode, press the Eco Mode button.

Keystone Picture:

To adjust the keystone picture, use the Keystone Picture button.

Smart Function:

To access the smart function, press the Smart button.

Help Focus/Zoom:

To get help with focusing or zooming, press the Help Focus/Zoom button.

Aspect Ratio Control:

To adjust the aspect ratio, use the Aspect buttons (Aspect Vol+ and Aspect Vol-).

Volume Control:

To adjust the volume, use the Volume buttons (Vol+ and Vol-).

Format Control:

To adjust the format, use the Format buttons (Format Vol+ and Format Vol-).

Eject:

To eject a disc or media, press the Eject button.

FAQ:

Q: Where can I find a replacement remote control for Nec RD-448E?

A: You can find a replacement remote control for Nec RD-448E at the following website: [Replacement Remote Control for Nec RD-448E](https://tout-telecommandes.fr/fr/Nec/1062875-23822-telecommande-de-remplacement-pour-Nec-RD-443E-7N900731.html)

<https://tout-telecommandes.fr/fr/Nec/1062875-23822-telecommande-de-remplacement-pour-Nec-RD-443E-7N900731.html>

Documents / Resources



[Mandis RD-443E Remote Control](#) [pdf] Instructions

RD-443E, 7N900731, RD-448E, RD-443E Remote Control, RD-443E, Remote Control, Control

References

- [Télécommande qui remplace NEC RD-443E \(7N900731\)](#)
- [User Manual](#)