



Mandis RD-448E Remote Control Instructions

[Home](#) » [Mandis](#) » **Mandis RD-448E Remote Control Instructions** 

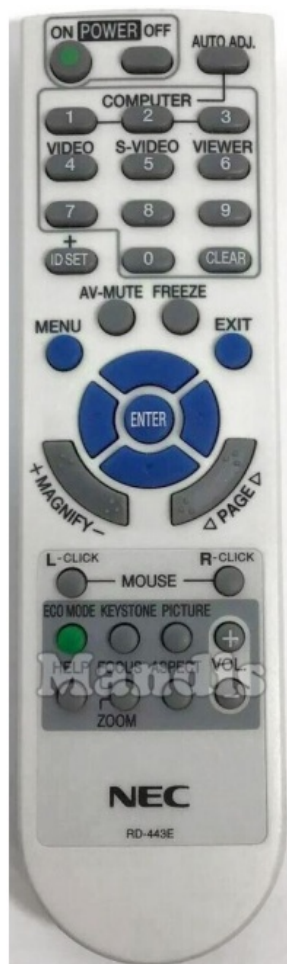 
Mandis RD-448E Remote Control Instructions

 
 
 
 


Contents

- [1 Remote Control](#)
- [2 Documents / Resources](#)
- [2.1 References](#)
- [3 Related Posts](#)

 
Remote Control

 


Original	Recharge
 Power On	 Power
 Power Off	 Shift + Power
 Auto ADJ	 Media
1 / Computer 1	1
2 / Computer 2	2
3 / Computer 3	3
4/Video	4
5/S-Video	5
7	7
6/Viewer	6
8	8
9	9
0	0
 Clear	 Shift + Up
 ID Set +	 List
 Menu	 Menu
 AV-Mute	 Mute



Original	Recharge
 AV-Mute	 AV
 Freeze	 Pause
 Exit	 Exit
 Up	 Up
 Left	 Left

 Enter	 Ok
 Right	 Right
 Down	 Down
 D.Zoom+	 Ch +
 D.Zoom-	 Ch -
 Page-	 Shift + Ch -
 Page+	 Shift + Ch +
 L-Click Mouse	 Guide
 R-Click Mouse	 Pre Ch
 Eco Mode	 3D
 Keystone	 Smart
 Picture	 Shift + Format

 Help	 D. Menu
 Focus/Zoom	 Eject
 Aspect	 Format
 Vol+	 Vol +
 Vol-	 Vol –

<https://tout-telecommandes.fr/fr/Nec/1062875-23822-telecommande-de-remplacement-pour-Nec-RD-443E-7N900731.html>



Documents / Resources

	Mandis RD-448E Remote Control [pdf] Instructions RD-448E Remote Control, RD-448E, Remote Control, Control
---	--

References

-  [Télécommande qui remplace NEC RD-443E \(7N900731\)](#)
- [User Manual](#)