



Mandis REMCON1192 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis REMCON1192 Remote Control Instructions 

Contents

- [1 Mandis REMCON1192 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Functions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mandis

Mandis REMCON1192 Remote Control



Product Information

Specifications

- Product Name: Nokia REMCON1192
- Model: REMCON1192

- Power: 2 AAA batteries (not included)
- Compatibility: Original and Replacement
- Color: Black
- Dimensions: N/A
- Weight: N/A
- Manufacturer: Nokia

Product Usage Instructions

Power On/Off

To turn the device on or off, press the “Power” button located on the remote control. This button is labeled with the number 1.

TV/Radio Mode

To switch between TV and Radio modes, press the “Exit” button followed by the “TV/Radio” button located on the remote control.

Mute

To mute the sound, press the “Mute” button located on the remote control.

Volume Control:

To adjust the volume, use the “Vol+” and “Vol-” buttons located on the remote control.

Navigation

To navigate through menus and options, use the arrow buttons on the remote control. The “Up,” “Left,” “OK” (center), “Right,” and “Down” buttons can be used for navigation.

Color Buttons

The remote control includes color buttons for additional functionality. These buttons are labeled with colors such as “Red,” “Green,” “Yellow,” and “Blue.” The specific usage of these buttons may vary depending on the device being controlled.

Additional Functions

The remote control may have additional buttons or features such as “Text,” “Menu,” “Guide,” “Options,” and “Freeze.” These buttons provide access to specific functions or settings on the device being controlled.

Frequently Asked Questions (FAQ)

Q: Where can I find the user manual for the Nokia REMCON1192 remote control?

A: You can find the user manual for the Nokia REMCON1192 remote control by visiting the following website:
[Nokia REMCON1192 User Manual](#).

Q: How do I replace the batteries in the remote control?

A: To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and insert two AAA batteries, ensuring they are inserted correctly with the correct polarity. Close the compartment securely.

Q: Is the Nokia REMCON1192 remote control compatible with all TV models?




A: The Nokia REMCON1192 remote control is compatible with a wide range of TV models. However, it is recommended to check the compatibility of your specific TV model before purchasing or using this remote control.

Functions

Original		Replacement	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / □		0
	Exit / TV/Radio		Exit
	Exit / TV/Radio		TV/R
	Mute		Mute
	Vol-		Vol -
	Vol+		Vol +
	i		Info

Original		Replacement	
	Back		Back
	Text		Text
	Menu		Menu
	Guide		Guide
	P+		Ch +
	P-		Ch -
	↑		Shift + Ch +
	↓		Shift + Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green / Option		Green
	Green / Option		Options
	Yellow / Freeze		Yellow
	Yellow / Freeze		Pause
	Blue / Recall		Blue
	Blue / Recall		Pre Ch

<https://all-remote-controls.co.uk/en/1061195-51086-replacement-remote-control-for-Nokia-REMCON1192.html>

	Mandis REMCON1192 Remote Control [pdf] Instructions REMCON1192 Remote Control, REMCON1192, Remote Control, Control
	Mandis REMCON1192 Remote Control [pdf] Instructions REMCON1192 Remote Control, REMCON1192, Remote Control, Control
	Mandis REMCON1192 Remote Control [pdf] Instructions REMCON1192 Remote Control, REMCON1192, Remote Control, Control

References

- [M Replacement remote control for NOKIA REMCON1192](#)
- [User Manual](#)