



Mandis REMCON1192 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis REMCON1192 Replacement Remote Control Instructions 

Mandis REMCON1192 Replacement Remote Control Instructions





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / □		0
	Exit / TV/Radio		Exit
	Exit / TV/Radio		TV/R
	Mute		Mute
	Vol-		Vol -
	Vol+		Vol +
	i		Info
	Back		Back
	Text		Text
	Menu		Menu
	Guide		Guide
	P+		Ch +
	P-		Ch -
	Up		Shift + Ch +
	Left		Shift + Ch -
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green / Option		Green
	Green / Option		Options
	Yellow / Freeze		Yellow



Original	Replacement
	Yellow / Freeze
	Blue / Recall
	Blue / Recall

Nokia REMCON 1192





Contents

[1 Documents / Resources](#)

[1.1 References](#)

[2 Related Posts](#)

Documents / Resources



[Mandis REMCON1192 Replacement Remote Control](#) [pdf] Instructions

REMCON1192 Replacement Remote Control, REMCON1192, Replacement Remote Control, Remote Control, Control

References

- [User Manual](#)