




Mandis REMCON457 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis REMCON457 Remote Control Instructions 

Contents

- [1 Mandis REMCON457 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Product Overview](#)
- [5 Remote Using Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Mandis REMCON457 Remote Control



Product Information

Specifications

- **Product Name:** Kathrein RC 400
- **Model Number:** 1060629-27883
- **Compatible with:** Kathrein devices
- **Color:** Black
- **Power Source:** 2 AAA batteries (not included)

FAQ

- **Q:** Is this remote control compatible with all Kathrein devices?
 - **A:** Yes, this remote control is designed to be compatible with various Kathrein devices.
- **Q:** How do I replace the batteries?
 - **A:** To replace the batteries, locate the battery compartment on the back of the remote control. Open it and insert two AAA batteries, making sure to match the polarity (+/-) correctly. Close the compartment

securely.

- **Q:** Can I use this remote control with other brands?
 - **A:** This remote control is specifically designed for Kathrein devices and may not work with other brands.

Product Usage Instructions

Power On/Off

- To turn on the device, press the “Power” button located at the top of the remote.
- To turn it off, press the same button again.

Navigation Buttons

The remote control features navigation buttons for easy menu and content navigation. Use the following buttons:

- “Up” – Move the selection up
- “Down” – Move the selection down
- “Left” – Move the selection to the left
- “Right” – Move the selection to the right

OK Button

- The “OK” button is used to confirm selections or execute commands.
- Press this button when you have made a selection or want to activate a function.

Volume Control

- Use the “Volume Up” and “Volume Down” buttons to adjust the audio volume.

Mute

- The “Mute” button allows you to temporarily mute the audio.
- Press it again to unmute.

Numeric Keypad

- The remote control has a numeric keypad for entering numbers or selecting channels directly.
- Press the corresponding number buttons to perform the desired action.

Additional Buttons

The remote control also includes additional buttons for various functions:

- “Menu” – Access the device’s menu
- “Home” or “Smart” – Go to the home screen or access smart features

- “List” – Display a list of available options
- “Info” – Show information about the current content
- “Sleep” or “Timer” – Set a sleep timer or timer for automatic shutdown
- “TV/Radio” – Switch between TV and radio modes
- “ProUgpram” – Access programming options
- “Dimmer” – Adjust the brightness of the device’s display
- “Audio/Lang I/II” – Change audio language or audio settings
- “AV/Input/RDS” – Switch between AV inputs or access RDS features


Product Overview



Remote Using Instructions

	A/B		Yellow / YouTube / Repeat
	M		Menu / Home
	F		Smart / List
	Power		Power
	L		Display / Media
	i		Info / Angle
	⌚		Sleep / Timer
	TV		TV/Radio /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Mute		Mute / Dimmer
	⌂		Audio / Lang I/II
	R		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Documents / Resources

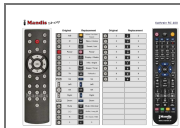

[Mandis REMCON457 Remote Control](#) [pdf] Instructions
REMCON457 Remote Control, REMCON457, Remote Control, Control

References

-  [Replacement remote control for KATHREIN RC400](#)
- [User Manual](#)