



Mandis REMCON938 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis REMCON938 Remote Control Instructions 

Contents

- [1 Mandis REMCON938 Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Replacement Remote Button Function](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Mandis

Mandis REMCON938 Remote Control



Product Information

The product is a remote control designed for a specific device. It has various buttons and functions to control the device's features. The remote control can be used to power on/off the device, navigate menus, adjust volume, change channels, play and pause content, and access additional settings. The remote control has a compact and ergonomic design, making it comfortable to hold and easy to use. It requires batteries for operation.

Specifications

- **Model:** DHX I 105
- **Compatibility:** Designed for a specific device
- **Power Source:** Battery-operated

Product Usage Instructions

- **Power On/Off**

To power the device, press the "Power" button. To power off, press the "Power" button again.

- **Menu Navigation**

Use the arrow buttons (Up, Down, Left, Right) to navigate through menus and options on the device's interface.

- **Volume Control**

To adjust the volume, use the "Vol +" and "Vol -" buttons on the remote control.

- **Channel Selection**

Change channels by pressing the number buttons (1-9) directly or use the "Preset +", "Preset -", "Right / Sch

+", and "Left / Sch -" buttons to navigate through channels.

- **Play and Pause**

Use the "Play", "Pause", and "Stop" buttons to control the playback of content on the device.

- **Additional Functions**

The remote control provides additional functions such as adjusting audio settings, subtitles, zooming, repeating, and accessing the device's menu. These functions can be accessed using the corresponding buttons on the remote control.

Replacement Remote Button Function


[DHX I 105](#)



Original	Rechange
	Power
	Open / Close
	Reset
	P-Scan
	Mute
	Setup
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	10+

Original	Rechange
	GOTO
	Auto.Sch / Title.PBC
	ST/MO / Intro
	Up / Preset +
	Down / Preset -
	Right / Sch +
	Left / Sch -
	Play / Save
	Play
	Function
	Return
	FM / AM
	Pause
	Stop
	I <<
	>> I
	<<



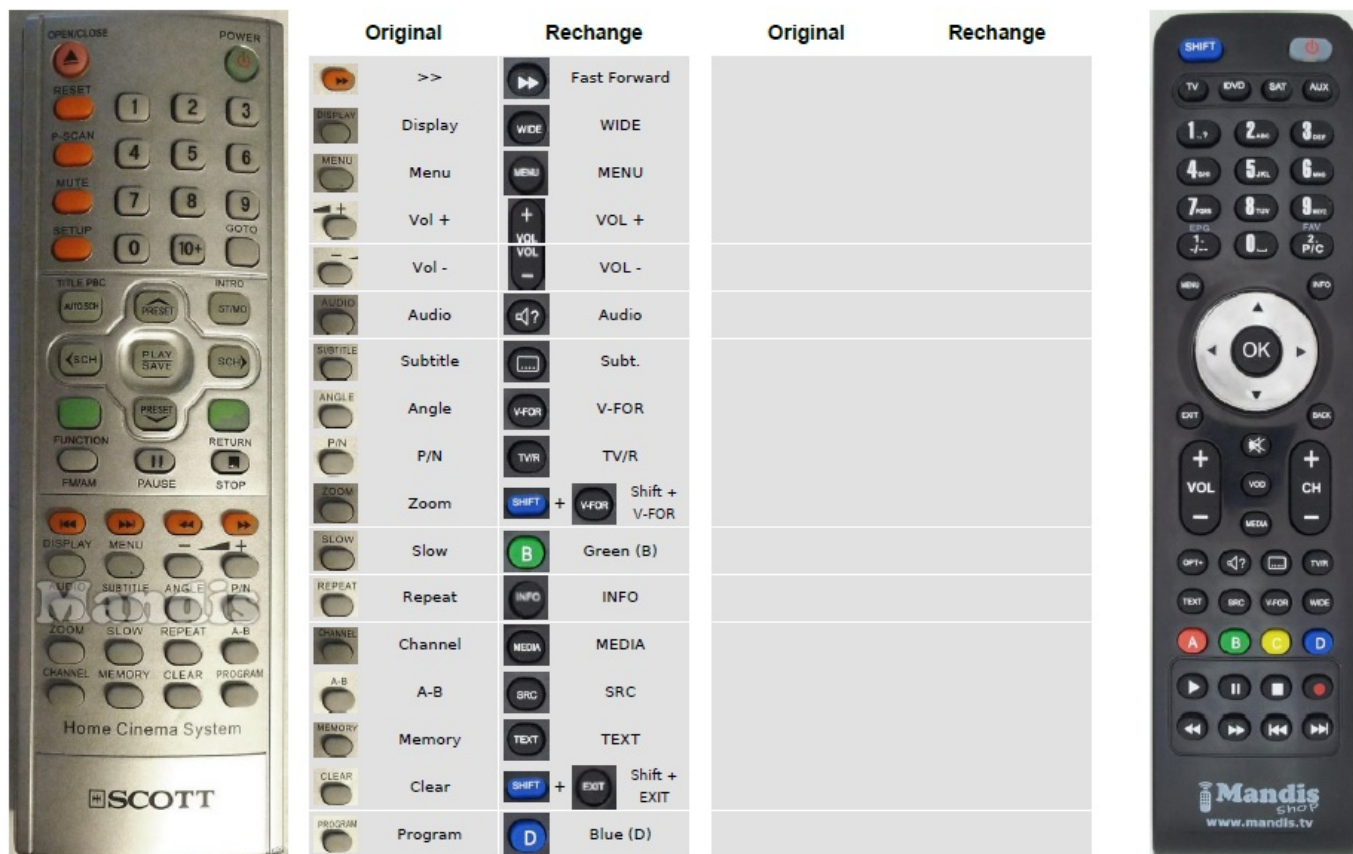

<https://tout-telecommandes.fr/fr/1056134-50306-telecommande-de-remplacement-pour-REMCN938.html>.

FAQ

- Q: What devices is the DHX I 105 remote control compatible with?**

A: The DHX I 105 remote control is designed for a specific device. Please check the compatibility of the remote control with your device before purchasing.

- Q: How do I replace the batteries in the remote control?**

A: To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and remove the old batteries. Insert new batteries, ensuring correct polarity, and close the compartment securely.

Documents / Resources

	Mandis REMCON938 Remote Control [pdf] Instructions REMCN938 Remote Control, REMCON938, Remote Control, Control
---	--

References

-  [Télécommande qui remplace REMCON938](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)