




Mandis RM-ADU002-AMP Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-ADU002-AMP Remote Control Instructions 

Contents

- [1 Mandis RM-ADU002-AMP Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 BUTTON FUNCTION](#)
- [6 Frequently Asked Questions](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis RM-ADU002-AMP Remote Control



Product Information

The Sony RM-ADU002 is a remote control designed for use with Sony audio and video equipment. It is compatible with the Power Theatre system and offers various functions for controlling different devices.

Specifications:

- Model: RM-ADU002
- Compatibility: Sony audio and video equipment
- Power Source: 2 AAA batteries (not included)
- Range: Up to 30 feet

Product Usage Instructions

- Power On/Off:
To turn on the device, press the “Power” button. To turn it off, press and hold the “Power” button until the device shuts down.
- Menu Navigation:
Use the arrow buttons (Up, Down, Left, Right) to navigate through menus and options. Press the “Enter” or

“Ok” button to confirm selections.

- Volume Control:

To adjust the volume, use the “Volume+” and “Volume-” buttons. Press the “Mute” button to mute/unmute the sound.

- Channel Selection:

For TV models, use the “CH+” and “CH-” buttons to change channels. Press the “TV/R” button to switch between TV and Radio modes.

- Media Playback:

For media playback, use the “Play”, “Pause”, and “Stop” buttons. The “Skip Forward” and “Skip Backward” buttons can be used to navigate within a track or video.

 




 






 
 
 

 

 
 



 
 
 
 
 
 

 

 

 
- Additional Functions:

The remote control also offers additional functions such as “Guide” for accessing TV program guides, “Subtitle” for enabling subtitles, and “Info” for displaying information about the current content.

OVERVIEW



BUTTON FUNCTION

Originale		Sostituto	
	Power		Power
	Power Theatre	 + 	Shift + Power
	Sleep		Sleep
	Tuner Menu		D. Menu
	AMP Menu		Media
	Function		Smart
	Sound Field		Green
	Repeat / FM Mode		Text
	Tuner Band		TV/R
	Display		Info
	Picture Navi		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Album-		Shift + Ch -
	Album+		Shift + Ch +
	Top Menu		Shift + Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down

	Return		Back
	Display		Shift + Info
	Muting		Mute
	Volume+		Vol +
	Volume-		Vol -
	I<</Preset-		I<<
	←/Replay/<II Step		Ch -
	Step II>/Advance/→		Ch +
	>>I/Preset+		>>I
	<</<I/Tuning-		<<
	I>/>>/Tuning+		>>
	Play		Play
	Pause		Pause
	Stop		Stop

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	TV Vol+		Vol +
	TV Vol-		Vol -
	TV CH+		Ch +
	TV CH-		Ch -
	Tv/Video		TV/R

Frequently Asked Questions

- Q: How do I replace the batteries in the remote control?

A: To replace the batteries, locate the battery compartment on the back of the remote control. Open it and insert two AAA batteries, making sure to match the polarity (+/-) correctly. Close\ the compartment securely.

- Q: Can I use this remote control with other brands of audio/video equipment?

A: The Sony RM-ADU002 is specifically designed for use with Sony equipment. While it may work with some other brands, full compatibility cannot be guaranteed.

- Q: How far is the remote control's range?

A: The remote control has a range of up to 30 feet under normal conditions. However, the range may vary depending on factors such as obstacles and interference.

<https://tutti-i-telecomandi.it/it/Sony/1061599-30818-telecomando-di-sostituzione-per-Sony-RM-ADU002.html>
[Sony RM-ADU002-AMP](#)



[Mandis RM-ADU002-AMP Remote Control](#) [pdf] Instructions

RM-ADU002-AMP, RM-ADU002-TV, RM-ADU002-AMP Remote Control, RM-ADU002-AMP, Remote Control, Control

References

- [M Telecomando sostituto di SONY RM-ADU002](#)
- [User Manual](#)