



Mandis RM-ADU002 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-ADU002 Remote Control Instructions 



Instructions



RM-ADU002 Remote Control

Contents

1 RM-ADU002 Remote Control

 
2 Documents / Resources

2.1 References

3 Related Posts

RM-ADU002 Remote Control

Originale		Sostituto		Originale		Sostituto	
	Power		Power		7		7
	Power Theatre	 + 	Shift + Power		8		8
	Sleep		Sleep		9		9
	Tuner Menu		D. Menu		0		0
	AMP Menu		Media		Clear		Exit
	Function		Smart		Audio		Dual
	Sound Field		Green		Subtitle		Subt
	Repeat / FM Mode		Text		Angle		Red
	Tuner Band		TV/R		Album-		Shift + Ch -
	Display		Info		Album+		Shift + Ch +
	Picture Navi		Guide		Top Menu		Shift + Menu
	1		1		Menu		Menu
	2		2		Up		Up
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Right		Right
	6		6		Down		Down

	Return		Back
	Display		Shift + Info
	Muting		Mute
	Volume+		Vol +
	Volume-		Vol -
	I<</Preset-		I<<
	←·/Replay/<II Step		Ch -
	Step II>/Advance/·→		Ch +
	>>I/Preset+		>>I
	<</<I/Tuning-		<<
	I>/>>/Tuning+		>>
	Play		Play
	Pause		Pause
	Stop		Stop

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	TV Vol+		Vol +
	TV Vol-		Vol -
	TV CH+		Ch +
	TV CH-		Ch -
	Tv/Video		TV/R

[Sony RM-ADU002-TV \(!\[\]\(21199eb166cc97331a0c54c649195dcc_img.jpg\) \)](#)



<https://tutti-i-telecomandi.it/it/Sony/1061599-30818-telecomando-di-sostituzione-per-Sony-RM-ADU002.html>



Documents / Resources

	Mandis RM-ADU002 Remote Control [pdf] Instructions RM-ADU002 Remote Control, RM-ADU002, Remote Control, Control
	Mandis RM-ADU002 Remote Control [pdf] Instructions RM-ADU002 Remote Control, RM-ADU002, Remote Control, Control

References

-  [Telecomando sostituto di SONY RM-ADU002](#)
- [User Manual](#)