

# Mandis RM-ADU002 Replacement Remote Control Instructions

Home » Mandis » Mandis RM-ADU002 Replacement Remote Control Instructions



#### **Contents**

- 1 Mandis RM-ADU002 Replacement Remote Control
- **2 Product Information**
- 3 Specifications
- **4 Product Usage Instructions**
- 5 FAQS
- **6 KEYS FUNCTION**
- 7 Documents / Resources
  - 7.1 References



Mandis RM-ADU002 Replacement Remote Control



#### **Product Information**

The Sony RM-ADU002 is a remote control designed for use with Sony audio-visual equipment, specifically the Power Theatre system. It is a replacement remote that can be used as an alternative to the original remote.

Product Name: Sony RM-ADU002Compatibility: Power Theatre system

Replacement: YesManufacturer: Sony

• Website: Sony RM-ADU002 Replacement Remote.

## **Specifications**

- Power: The remote control has a dedicated power button to turn on/off the connected audio-visual equipment.
- Function: The remote control has various function buttons to control different features of the Power Theatre system.
- Sound Field: The remote control allows you to select different sound field options.
- Repeat/FM Mode: The remote control has buttons to control the repeat function and FM mode.
- Tuner Band: The remote control allows you to switch between different tuner bands.
- **Display:** The remote control has buttons to control the display settings.

• Picture Navi: The remote control provides navigation options for picture settings.

# **Product Usage Instructions**

#### Power On/Off

 To turn on the Power Theatre system, press the "Power" button. To turn it off, press the "Power" button again.

#### Function Selection

• Use the function buttons on the remote control to select different features of the Power Theatre system, such as audio playback, video playback, and more.

#### Sound Field Selection

The remote control allows you to choose different sound field options to enhance your audio experience.
Use the dedicated "Sound Field" button to cycle through the available options.

### Repeat and FM Mode

 For audio playback, the remote control provides a repeat function. Use the "Repeat" button to enable or disable repeat mode. Additionally, the remote control has an FM mode button to switch between different FM modes.

#### Tuner Band Selection

 If your Power Theatre system includes a tuner, use the remote control's "Tuner Band" button to switch between different tuner bands, such as AM and FM.

## Display and Picture Settings

• The remote control has buttons to control the display settings of the Power Theatre system. You can adjust picture settings, navigate through menus, and access additional options using the "Display" and "Picture Navi" buttons.

### **FAQS**

- Q: Is the Sony RM-ADU002 compatible with all Sony audio-visual equipment?
- **A:** The Sony RM-ADU002 is designed specifically for use with the Power Theatre system. It may not be compatible with other Sony audio-visual equipment.
- Q: Can I use the Sony RM-ADU002 as a replacement for the original remote?
- A: Yes, the Sony RM-ADU002 is a replacement remote that can be used as an alternative to the original remote for the Power Theatre system.

#### **KEYS FUNCTION**





Originale		Sostituto		Originale	Sostituto
1/6	Power	(4)	Power		
	1	1	1		
•(2)	2	2	2		
•3	3	3	3		
*4	4	4	4		
• 5	5	5	5		
•6	6	6	6		
•7	7	7	7		
	8	8	8		
.9	9	9	9		
10/0	0	0	0		
GLEAR	-/	GUIDE	Guide		
VOLUME	TV Vol+	+ vol	Vol +		
5	TV Vol-	VOL	Vol -		
TV CH + PRESET +	TV CH+	+ cH	Ch +		
TV CH - PRESET -	TV CH-	СН	Ch -		
TV/VIDEO	Tv/Video	TV/R	TV/R		

 $\frac{https://tutti-i-telecomandi.it/it/Sony/1061599-30818-telecomando-di-sostituzione-per-Sony-RM-ADU002.html.\\$ 

## **Documents / Resources**



Mandis RM-ADU002 Replacement Remote Control [pdf] Instructions RM-ADU002 Replacement Remote Control, RM-ADU002, Replacement Remote Control, Remote Control

## References

• User Manual

Manuals+, Privacy Policy