



Mandis RM-ANU 191 Original Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis RM-ANU 191 Original Remote Control Instruction Manual 

Contents

- [1 Mandis RM-ANU 191 Original Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 REPLACEMENT PARTS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Mandis RM-ANU 191 Original Remote Control



Product Information

Specifications

- Power: Yes
- TV Function: Yes
- Bluetooth: Yes

Product Usage Instructions

• Power

To turn on the product, press the “Power” button. To turn off the product, press and hold the “Power” button.

• TV Function

The TV function allows you to control various TV settings. Use the following buttons to navigate through the TV options:

- “Vol+” and “Vol-” buttons to adjust the volume.
- “Mute” button to mute/unmute the TV.
- “Prog+” and “Prog-” buttons to change TV channels.
- “Source” button to select different input sources.
- “Surround” button to enable/disable surround sound.

• Bluetooth Pairing

To pair your device with the product via Bluetooth, follow these steps:

- Ensure that the product is turned on.

- Enable Bluetooth on your device.
- Press and hold the “Bluetooth Pairing” button until the pairing indicator starts flashing.
- Select the product from the list of available devices on your device’s Bluetooth settings.
- Once connected, you can now stream audio wirelessly to the product.

• **Bass and Treble Adjustment**

You can adjust the bass and treble levels using the following buttons:

- “Bass+” and “Bass-” buttons to increase/decrease the bass.
- “Treble+” and “Treble-” buttons to increase/decrease the treble.

• **Recharge**

To recharge the product, follow these steps:

- Connect the provided charging cable to the product’s charging port.
- Plug the other end of the charging cable into a power source.
- The product’s battery will start charging. The charging indicator will show the progress.
- Once fully charged, disconnect the charging cable from the product.

• **Options**

The “Options” button provides additional settings and features. Press the “Options” button to access these options.

• **Media**

The “Media” button allows you to switch to media playback mode. Press the “Media” button to enter media mode.

• **Smart**

The “Smart” button activates the smart features of the product. Press the “Smart” button to access smart features.

• **AV and Dual**

The “AV” and “Dual” buttons are used for switching between different audio/video inputs. Press the respective button to select the desired input.

• **Channel Selection**

The “Ch+” and “Ch-” buttons are used for channel selection. Press the “Ch+” button to go to the next channel and the “Ch-” button to go to the previous channel.

• **Navigation**

The “>>|” and “|” buttons are used for navigation purposes. Use these buttons to navigate through menus and options.

FAQ

• **Q: How do I connect my device via Bluetooth?**

A: To connect your device via Bluetooth, follow the Bluetooth pairing instructions provided in the user manual.

• **Q: How do I adjust the bass and treble levels?**


A: Use the “Bass+” and “Bass-” buttons to adjust the bass level, and use the “Treble+” and “Treble-” buttons to adjust the treble level.



 


 

 
 


 





















 
• **Q: How do I recharge the product?**

 



A: Connect the charging cable to the product’s charging port and plug the other end into a power source. The product will start charging. Once fully charged, disconnect the charging cable.


- **Q: What does the “Options” button do?**
A: The “Options” button provides additional settings and features. Press the “Options” button to access these options.
- **Q: How do I switch to media playback mode?**
A: Press the “Media” button to switch to media playback mode.
- **Q: What does the “Smart” button do?**
A: The “Smart” button activates the smart features of the product. Press the “Smart” button to access smart features.
- **Q: How do I select different audio/video inputs?**
A: Use the “AV” and “Dual” buttons to switch between different audio/video inputs.
- **Q: How do I navigate through channels and menus?**
A: Use the “Ch+” and “Ch-” buttons for channel selection, and use the “>>I” and “I<<” buttons for navigation through menus and options.

REPLACEMENT PARTS



	Original	Recharge
	Power	 Power
	Power Tv	 Shift + Power
	Function	 Options
	Bluetooth	 Media
	Pairing	 Smart
	Vol+ Tv	 Shift + Vol +
	Vol- Tv	 Shift + Vol -
	Mute Tv	 Shift + Mute
	Prog+ Tv	 Shift + Ch +
	Prog- Tv	 Shift + Ch -
	Source Tv	 AV
	Surround	 Dual
	Bass+	 Ch +
	Bass-	 Ch -
	Treble+	 >>I
	Treble-	 I<<
	Vol+	 Vol +

	Original	Recharge
	Vol-	 Vol -
	Mute	 Mute



<https://tout-telecommandes.fr/fr/Sony/1058223-66014-telecommande-de-remplacement-pour-Sony-RM-ANU-191-149271111.html>



[Mandis RM-ANU 191 Original Remote Control](#) [pdf] Instruction Manual

RM-ANU 191 Original Remote Control, RM-ANU 191, Original Remote Control, Remote Contro
l

References

- [M Télécommande qui remplace SONY RM-ANU 191 \(149271111\)](#)
- [User Manual](#)