



Mandis RM-ANU 191 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-ANU 191 Remote Control Instructions 



[Sony RMANU191](#)

Contents

- [1 RM-ANU 191 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

RM-ANU 191 Remote Control



Original	Recharge	Original	Recharge
Power	Power	Vol-	Vol -
Power Tv	Shift + Power	Mute	Mute
Function	Options		
Bluetooth	Media		
Pairing	Smart		
Vol+ Tv	Shift + Vol +		
Vol- Tv	Shift + Vol -		
Mute Tv	Shift + Mute		
Prog+ Tv	Shift + Ch +		
Prog- Tv	Shift + Ch -		
Source Tv	AV		
Surround	Dual		
Bass+	Ch +		
Bass-	Ch -		
Treble+	>>I		
Treble-	I<<		
Vol+	Vol +		



<https://tout-telecommandes.fr/fr/Sony/1058223-66014-telecommande-de-remplacement-pour-Sony-RM-ANU-191-149271111.html>

Documents / Resources

	Mandis RM-ANU 191 Remote Control [pdf] Instructions RM-ANU 191, 149271111, RM-ANU 191 Remote Control, RM-ANU 191, Remote Control, Control
--	--

References

- [M Télécommande qui remplace SONY RM-ANU 191 \(149271111\)](#)
- [User Manual](#)