



Mandis RM-C1244 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-C1244 Remote Control Instructions 

 
Mandis RM-C1244 Remote Control

 


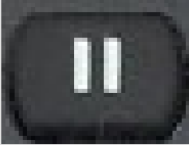 
Contents

- [1 Remote Control Instruction](#)
- [2 Customer Support](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Remote Control Instruction

Original	Replacement
 Power	 Power
 Mute	 Mute
 Red / Eject	 Red

 Red / <u>Eject</u>	 <u>Eject</u>
 Green / Title	 Green
 Yellow / DVD	 Yellow
 Yellow / DVD	 Options
 Blue / A-B	 Blue
 <</[≡0]	 <<
 >>/[≡?]	 >>
 <</[≡+]	 <<
 >> /[≡..]	 >>

 Play	PLAY MODE  Play
 Pause	 Pause
 Stop	 Stop
	HOME  Smart
ANGLE/ED  Angle / [≡i]	REPEAT  Text
 Return / Text	
 Return / Text	SHIFT  + RETURN  Shift + Back
 Subtitle	AD  Subt
 Display	SHIFT  + DISPLAY  Shift + Info

 Menu / Info	 Info
 Menu / Info	 D. Menu
 Menu	 Menu
 Up	 Up
 Source	 AV
 Left	 Left
 OK	 Ok
 Right	 Right
 EPG	 Guide



Down



Exit



Vol+



FAV



CH+



Down



Exit



Vol +



Pre Ch

 
 


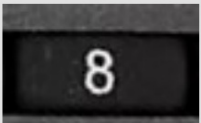 
Ch +



Original

Replacement

 VOL —	Vol-	 VOL —	Vol -
 REP	REP	 REC MODE	Rec
 CH —	CH-	 CH —	Ch -
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6

 7	 7
 8	 8
 9	 9
 Audio	 Dual
 0	 0
 Recall / Goto	 Back





Customer Support

<https://all-remote-controls.co.uk/en/JVC/1064704-81826-replacement-remote-control-for-JVC-RM-C1244.html>



Documents / Resources



[Mandis RM-C1244 Remote Control](#) [pdf] Instructions
RM-C1244 Remote Control, RM-C1244, Remote Control, Control

References

- [M Replacement remote control for JVC RM-C1244](#)
- [User Manual](#)